

COMPONENTS IN PNC NUMERIC SEQUENCE

P.N.C.	COMPONENT								
		GOLD	GOLD PREF	SILVER	SILVER PREF	BRONZE	PREOWNED	PREOWN PREF	PREOWN+PLUS NN
11010	CYLINDER BLOCK	•	•	•	•	•	•	•	•
11021	CYLINDER BLOCK WELSH PLUG	•	•	•	•	•	•	•	•
11041	CYLINDER HEAD	•	•	•	•	•	•	•	•
11044	CYLINDER HEAD GASKET	•	•	•	•	•	•	•	•
11046	CYLINDER HEAD COVER	•	•	•	•	•	•	•	•
11051	CYLINDER HEAD WELSH PLUG	•	•	•	•	•	•	•	•
11056	CYLINDER HEAD BOLT	•	•	•	•	•	•	•	•
11060	WATER OUTLET	•	•						
11061	THERMOSTAT HOUSING	•	•						
11062	WATER OUTLET GASKET	•	•	•	•	•	•	•	•
11063	CYLINDER BLOCK WATER OUTLET	•	•						
11072	THERMOSTAT HOUSING GASKET	•	•	•	•	•	•	•	•
11098	INTAKE VALVE SEAT	•	•	•	•	•	•	•	•
11099	EXHAUST VALVE SEAT	•	•	•	•	•	•	•	•
11110	OIL PAN	•	•	•	•	•	•	•	•
11121	OIL PAN GASKET	•	•	•	•	•	•	•	•
11128	OIL PAN DRAIN PLUG	•	•	•	•	•	•	•	•
11140	DIPSTICK	•	•	•	•	•	•	•	•
11220	FRONT ENGINE MOUNT	•	•	•	•	•	•	•	•
11221	MOUNT – TRANSMISSION LOWER	•	•	•	•	•	•	•	•
11232	FRONT MOUNT BRACKET	•	•	•	•	•	•	•	•
11240	CENTER MEMBER	•	•	•	•	•	•	•	•
11246	ENGINE DAMPER ASSY	•	•	•	•	•	•	•	•
11262	GUSSET	•	•	•	•	•	•	•	•
11273	ENGINE MOUNT ACTUATOR ASSY	•	•	•	•	•	•	•	•
11290	ENGINE MOUNT DAMPER	•	•	•	•	•	•	•	•
11320	REAR ENGINE MOUNT	•	•	•	•	•	•	•	•
11325	ROLL DAMPER ENGINE MOUNT	•	•	•	•	•	•	•	•
11338	A/T AIR GUIDE	•	•						
11340	REAR MOUNT BRACKET	•	•	•	•	•	•	•	•
11390	BUFFER	•	•	•	•	•	•	•	•
11710	ALTERNATOR BRACKET	•	•						
11715	ALTERNATOR ADJUSTING BAR	•	•						
11720	DRIVE BELT	•	•	•	•	•	•	•	•
11721	TIMING BELT	•	•	•	•	•	•	•	•
11750	SERPENTINE BELT TENSIONER ASSY	•	•	•	•	•	•	•	•
11810	PCV VALVE	•	•						
11910	COMPRESSOR BRACKET	•	•						
11925	IDLER PULLEY	•	•			•	•	•	•
11926	IDLER PULLEY BRACKET	•	•						
11927	SERPENTINE BELT TENSIONER BRACKET	•	•	•	•	•	•	•	•
11935	IDLER PULLEY BRACKET	•	•						
11940	POWER STEERING PUMP BRACKET	•	•						
11945	ADJUSTING BAR	•	•						
12010	PISTON & PIN SET	•	•	•	•	•	•	•	•
12033	PISTON RINGS	•	•	•	•	•	•	•	•
12100	CONNECTING ROD & CAP SET	•	•	•	•	•	•	•	•
12111	CONNECTING ROD BEARINGS	•	•	•	•	•	•	•	•
12121	PISTON OIL JET	•	•	•	•	•	•	•	•
12200	CRANKSHAFT	•	•	•	•	•	•	•	•
12207	MAIN BEARINGS	•	•	•	•	•	•	•	•
12279	REAR MAIN SEAL	•	•	•	•	•	•	•	•
12303	CRANKSHAFT PULLEY	•	•	•	•	•	•	•	•
12309	PULLEY BOLT	•	•	•	•	•	•	•	•
12310	FLYWHEEL ASSY	•	•	•	•	•	•	•	•
12312	FLYWHEEL RING GEAR	•	•	•	•	•	•	•	•
12315	FIXING BOLT	•	•	•	•	•	•	•	•
12331	DRIVE PLATE ASSY	•	•	•	•	•	•	•	•
12416	BALANCER UNIT	•	•	•	•	•	•	•	•
13001	CAMSHAFT	•	•	•	•	•	•	•	•

P.N.C.	COMPONENT								
		GOLD	GOLD PREF	SILVER	SILVER PREF	BRONZE	PREOWNED	PREOWN PREF	PREOWN+PLUS NN
13002	CAMSHAFT BUSHING (OHV)	•	•	•	•	•	•	•	•
13014	IDLER GEAR	•	•	•	•	•	•	•	•
13015	FUEL PUMP CAM	•	•	•	•	•	•	•	•
13021	CRANKSHAFT GEAR	•	•	•	•	•	•	•	•
13024	CAMSHAFT GEAR	•	•	•	•	•	•	•	•
13024	CAMSHAFT SPROCKET	•	•	•	•	•	•	•	•
13025	SPROCKET ASSY — VTC	•	•	•	•	•	•	•	•
13028	TIMING CHAIN	•	•	•	•	•	•	•	•
13035	FRONT COVER	•	•	•	•	•	•	•	•
13042	CRANKSHAFT FRONT OIL SEAL	•	•	•	•	•	•	•	•
13043	CAMSHAFT OIL SEAL	•	•	•	•	•	•	•	•
13044	COVER GASKET	•	•	•	•	•	•	•	•
13049	WATER INLET	•	•	•	•	•	•	•	•
13051	LIFTER GUIDE	•	•	•	•	•	•	•	•
13070	CHAIN TENSIONER	•	•	•	•	•	•	•	•
13081	TIMING CHAIN OIL JET	•	•	•	•	•	•	•	•
13085	CHAIN TENSIONER SIDE GUIDE	•	•	•	•	•	•	•	•
13161	JACK SHAFT	•	•	•	•	•	•	•	•
13168	JACK SHAFT OIL SEAL	•	•	•	•	•	•	•	•
13170	JACK SHAFT GEAR	•	•	•	•	•	•	•	•
13201	INTAKE VALVE	•	•	•	•	•	•	•	•
13202	EXHAUST VALVE	•	•	•	•	•	•	•	•
13203	VALVE SPRING	•	•	•	•	•	•	•	•
13205	VALVE SPRING SEAT	•	•	•	•	•	•	•	•
13207	VALVE OIL SEAL	•	•	•	•	•	•	•	•
13209	VALVE SPRING RETAINER	•	•	•	•	•	•	•	•
13212	VALVE GUIDE	•	•	•	•	•	•	•	•
13231	VALVE LIFTER	•	•	•	•	•	•	•	•
13234	VALVE PIVOT (L-ENGINE)	•	•	•	•	•	•	•	•
13252	ROCKER SHAFT	•	•	•	•	•	•	•	•
13256	VALVE ROCKER/SHAFT SPRING	•	•	•	•	•	•	•	•
13257	VALVE ROCKER ARM	•	•	•	•	•	•	•	•
13264	VALVE ROCKER COVER	•	•	•	•	•	•	•	•
13270	ROCKER COVER GASKET	•	•	•	•	•	•	•	•
13500	TIMING CHAIN REAR COVER	•	•	•	•	•	•	•	•
13520	FRONT COVER GASKET	•	•	•	•	•	•	•	•
13560	DUST COVER	•	•	•	•	•	•	•	•
14001	INTAKE MANIFOLD	•	•	•	•	•	•	•	•
14004	EXHAUST MANIFOLD	•	•	•	•	•	•	•	•
14006	CAP BOLT/STUD	•	•						
14011	LOWER MANIFOLD COLLECTOR	•	•	•	•	•	•	•	•
14012	MANIFOLD TUBE	•	•						
14013	MANIFOLD COLLECTOR	•	•	•	•	•	•	•	•
14018	INTAKE MANIFOLD SUPPORT	•	•						
14033	LOWER COLLECTOR GASKET	•	•	•	•	•	•	•	•
14035	MANIFOLD GASKET	•	•	•	•	•	•	•	•
14052	EC — WATER HOSE		•						
14053	WATER INLET PIPE	•	•						
14054	WATER CONNECTOR	•	•						
14055	WATER BY-PASS HOSE		•						
14080	COLLECTOR GASKET	•	•	•	•	•	•	•	•
14091	EXHAUST MANIFOLD COVER	•	•	•	•	•	•	•	•
14096	HEAT SHROUD	•	•	•	•	•	•	•	•
14120	EGR TUBE	•	•						
14411	TURBOCHARGER	•	•	•	•	•	•	•	•
14415	TURBOCHARGER GASKET	•	•	•	•	•	•	•	•
14440	EXHAUST OUTLET	•	•	•	•	•	•	•	•
14441	EXHAUST OUTLET COVER	•	•	•	•	•	•	•	•
14445	GASKET	•	•	•	•	•	•	•	•
14450	HEAT INSULATOR	•	•						

COMPONENTS IN PNC NUMERIC SEQUENCE

P.N.C.	COMPONENT								
		GOLD	GOLD PREF	SILVER	SILVER PREF	BRONZE	PREOWNED	PREOWN PREF	PREOWN+PLUS
14460	INLET TUBE	•	•						
14463	AIR INLET HOSE	•	•						
14465	INLET TUBE GASKET	•	•	•	•	•	•	•	•
14466	EMERGENCY RELIEF VALVE	•	•	•	•	•	•	•	•
14483	RE-CIRCULATION VALVE	•	•	•	•	•	•	•	•
14484	VACUUM CONTROL HOSE	•	•						
14496	INTERCOOLER ASSY	•	•						
14498	WATER PIPE, OUTLET	•	•						
14499	WATER PIPE, INLET	•	•						
14510	POWER VALVE ASSY	•	•	•	•	•	•	•	•
14517	POWER VALVE SOLENOID VALVE ASSY	•	•	•	•	•	•	•	•
14710	EGR CONTROL VALVE	•	•				•		
14711	EGR PASSAGE	•	•						
14729	EC-EGR VACUUM HOSE	•	•		•				
14730	EXHAUST TEMP SENSOR	•	•	•	•		•	•	
14741	BPT VALVE	•	•	•	•		•	•	
14810	A.I.V. UNIT CASE	•	•				•		
14821	A.I.V. TUBE	•	•				•		
14823	AIR INJECTION PIPE	•	•						
14832	AIR CONTROL VALVE	•	•				•		
14835	A.B. VALVE	•	•				•		
14854	AIR INJECTION VALVE	•	•				•		
14860	EC-HOSE	•	•		•				
14875	MANIFOLD CONNECTOR	•	•		•				
14880	A.I.V. BOX	•	•				•		
14890	THERMAL VACUUM VALVE	•	•						
14920	BOOST CONTROL VALVE	•	•						
14930	PURGE CONTROL VALVE ASSY	•	•				•		
14931	VALVE-EVAP.CAN.PURGE VOL.SOL.	•	•						
14934	RESONATOR - EVAP PURGE	•	•						
14935	VALUE ASSEMBLY CONTROL	•	•						
14939	SERVICE PORT - EVAP.	•	•	•	•	•	•	•	•
14949	VAPOR CANISTER ASSY	•	•						
14950	CARBON CANISTER	•	•						
14951	SCV SOLENOID VALVE	•	•	•	•	•	•	•	•
14952	POWER VALVE SOLENOID	•	•	•	•	•	•	•	•
14953	EPC VALVE	•	•	•	•	•	•	•	•
14954	EGR SOLENOID VALVE	•	•	•	•	•	•	•	•
14955	VACUUM CUT SOLENOID	•	•	•	•	•	•	•	•
14956	A.I.V. SOLENOID VALVE	•	•	•	•	•	•	•	•
14956	EGR MIXTURE SOLENOID	•	•	•	•	•	•	•	•
14958	SPARK DELAY VALVE	•	•				•		
14960	PRESSURE REG. CONTROL	•	•	•	•	•	•	•	•
14967	VALUE ASSEMBLY SOLENOID	•	•						
15010	OIL PUMP	•	•	•	•	•	•	•	•
15025	OIL PUMP GASKET	•	•	•	•	•	•	•	•
15040	OIL PUMP DRIVE SPINDLE	•	•	•	•	•	•	•	•
15043	OIL PUMP DRIVE GEAR	•	•	•	•	•	•	•	•
15050	OIL STRAINER	•	•	•	•	•	•	•	•
15066	FRONT COVER O-RING	•	•	•	•	•	•	•	•
15132	OIL PUMP REGULATOR VALVE	•	•	•	•	•	•	•	•
15155	DIPSTICK TUBE	•	•	•	•	•	•	•	•
15192	OIL INLET TUBE	•	•						
15194	CONNECTOR & GASKET	•	•	•	•	•	•	•	•
15197	OIL OUTLET TUBE	•	•	•	•	•	•	•	•
15238	OIL FILTER BRACKET	•	•						
15239	FILTER BRACKET GASKET	•	•	•	•	•	•	•	•
15241	OIL FILTER RELIEF VALVE	•	•	•	•	•	•	•	•
15255	OIL FILLER CAP	•	•						
15300	OIL FILTER REGULATOR VALVE	•	•	•	•	•	•	•	•

P.N.C.	COMPONENT								
		GOLD	GOLD PREF	SILVER	SILVER PREF	BRONZE	PREOWNED	PREOWN PREF	PREOWN+PLUS
16010	CARBURETOR	•	•						
16011	CHOKE CHAMBER	•	•						
16012	ELECTRO INJECTION UNIT	•	•	•	•	•	•	•	•
16017	VENTURI CHAMBER	•	•	•	•	•	•	•	•
16033	JET/AIR BLEEDS	•	•						
16044	ALTITUDE COMPENSATOR	•	•						
16044	ALTITUDE SWITCH	•	•	•	•	•	•	•	•
16059	POWER VALVE	•	•						
16061	FLOAT	•	•						
16101	NEEDLE VALVE	•	•						
16102	AIR-FUEL RATIO SOLENOID	•	•	•	•		•	•	
16103	ENRICHMENT SOLENOID	•	•	•	•		•	•	
16111	FUEL CONNECTOR	•	•						
16118	THROTTLE CHAMBER	•	•	•	•	•	•	•	•
16134	CARBURETOR LINKAGE	•	•						
16135	THROTTLE LINKAGE	•	•				•		
16150	ACCELERATOR PUMP	•	•						
16160	THROTTLE RETURN SPRING	•	•						
16174	MIXTURE HEATER/INSULATOR	•	•						
16175	MIXTURE HEATER	•	•				•		
16182	DASH POT	•	•	•	•	•	•	•	•
16183	THROTTLE POSITIONER	•	•						
16196	FUEL CUT SOLENOID	•	•	•	•	•	•	•	•
16197	F.I.C.D. SOLENOID VALVE	•	•	•	•	•	•	•	•
16250	I.A.S. UNIT	•	•	•	•	•	•	•	•
16260	IDLE SPEED CONTROL	•	•						
16262	SERVO DIAPHRAGM	•	•						
16313	DIAPHRAGM CHAMBER	•	•						
16313	THROTTLE CONTROL DIAPHRAGM	•	•						
16331	IDLE COMPENSATOR	•	•						
16361	ACCELERATOR TERMINAL	•	•						
16391	THERMO ELEMENT KIT	•	•	•	•		•	•	
16394	WAX HOLDER	•	•	•	•	•	•	•	•
16420	COVER PLATE/GASKET	•	•	•	•	•	•	•	•
16455	FLOAT CHAMBER GASKET	•	•						
16500	AIR CLEANER ASSY	•	•						
16510	VACUUM MOTOR ASSY	•	•						
16520	IDLE COMPENSATOR TUBE	•	•						
16523	AIR CLEANER INSULATOR	•	•						
16530	HOT AIR DUCT	•	•						
16577	AIR DUCT ASSY	•	•						
16580	AIR TEMP SENSOR	•	•	•	•	•	•	•	•
16585	RESONATOR	•	•						
16590	EXHAUST MANIFOLD COVER	•	•						
16601	COLD START VALVE	•	•	•	•	•	•	•	•
16603	FUEL INJECTOR	•	•	•	•	•	•	•	•
16604	INJECTOR	•	•	•	•	•	•	•	•
16767	ENGINE REVOLUTION SWITCH	•	•						
16805	BELT TENSIONER	•	•	•	•	•	•	•	•
17001	FUEL PUMP CONTROL UNIT	•	•	•	•	•	•	•	•
17001	FUEL PUMP CONTROL MODULE	•	•	•	•	•	•	•	•
17010	FUEL PUMP	•	•	•	•	•	•	•	•
17012	ELECTRIC FUEL PUMP	•	•	•	•	•	•	•	•
17014	FUEL PUMP CHECK VALVE	•	•	•	•	•	•	•	•
17099	FUEL PUMP GASKET	•	•	•	•	•	•	•	•
17103	FUEL CONNECTOR	•	•						
17118	THROTTLE CHAMBER	•	•						
17201	FUEL TANK	•	•	•	•	•	•	•	•
17220	TUBE ASSY FILLER	•	•						
17222	FUEL FILLER NECK	•	•	•	•	•	•	•	•

COMPONENTS IN PNC NUMERIC SEQUENCE

P.N.C.	COMPONENT								
		GOLD	GOLD PEF	NC	RC	NB	RB	NA	NL
17251	FUEL FILLER CAP	•	•						
17271	FUEL HOSE PROTECTOR	•	•						
17285	FUEL TANK PROTECTOR	•	•						
17310	FUEL TANK DRAIN PLUG	•	•	•	•	•		•	•
17325	EC-BREATHER HOSE	•	•		•				
17330	FUEL CHECK VALVE	•	•					•	
17333	EC-VENTILATION HOSE	•	•		•			•	
17337	EC-VAPOR VENT HOSE	•	•		•			•	
17342	O-RING	•	•	•	•	•		•	•
17368	BREATHER VALVE	•	•					•	
17371	EVAPORATOR SHUT-OFF VALVE	•	•					•	
17372	VACUUM CUT VALVE	•	•					•	
17484	B.C.D.D. ASSY	•	•	•	•	•	•	•	•
17501	FUEL OUTLET TUBE	•	•	•	•	•		•	•
17508	VAPOR VENT LINE	•	•					•	
17510	FUEL RETURN TUBE	•	•	•	•	•		•	•
17520	FRONT FUEL TUBE	•	•	•	•	•		•	•
18010	ACCELERATOR ARM	•	•					•	
18021	ACCELERATOR BRACKET	•	•						
18050	PEDAL STOPPER BRACKET	•	•						
18110	ACCELERATOR PEDAL	•	•						
18121	BELL CRANK ASSY	•	•						
18150	ACCELERATOR WIRE	•	•					•	
18200	BALL JOINT ASSY	•	•						
18215	RETURN SPRING	•	•						
18300	TORSION SHAFT ASSY	•	•						
18314	SHAFT SUPPORT	•	•						
18721	EC—TUBE & HOSE	•	•		•				
18930	ASCD O.D. CANCEL SWITCH	•	•	•	•		•	•	•
20711	FRONT EXHAUST GASKET	•	•	•	•	•	•	•	•
20712	CONVERTER GASKET	•	•	•	•	•	•	•	•
21010	WATER PUMP	•	•	•	•	•	•	•	•
21012	WATER PUMP HOUSING & GASKET	•	•	•	•	•	•	•	•
21014	WATER PUMP GASKET	•	•	•	•	•	•	•	•
21049	INTAKE MANIFOLD CONNECTOR & O-RING	•	•	•	•	•	•	•	•
21051	WATER PUMP/FAN PULLEY	•	•	•	•	•		•	•
21060	FAN BLADE	•	•	•	•	•		•	•
21082	FAN COUPLING ASSY	•	•	•	•	•		•	•
21200	THERMOSTAT	•	•					•	
21302	OIL COOLER PIPE	•	•		•			•	
21305	OIL COOLER-FIN TYPE	•	•	•	•	•		•	•
21306	OIL COOLER RADIATOR TYPE	•	•	•	•	•		•	•
21307	OIL COOLER PROTECTOR	•	•						
21310	OIL COOLER GASKET	•	•	•	•	•	•	•	•
21355	PT—OIL COOLER HOSE	•	•		•	•		•	•
21400	RADIATOR	•	•	•	•	•		•	•
21430	RADIATOR CAP	•	•						
21475	RADIATOR SHROUD	•	•		•	•		•	•
21480	RADIATOR DRAIN COCK	•	•	•	•	•		•	•
21490	INJECTOR BLOWER MOTOR	•	•	•	•	•	•	•	•
21496	BLOWER MOTOR INLET	•	•						
21497	BLOWER MOTOR BRACKET	•	•						
21498	BLOWER MOTOR CLAMP	•	•						
21499	BLOWER MOTOR AIR DUCT	•	•						
21501	UPPER RADIATOR HOSE	•	•		•				
21503	LOWER RADIATOR HOSE	•	•		•				
21510	RESERVOIR TANK	•	•	•	•	•	•	•	•
21511	RESERVOIR TANK BRACKET	•	•						
21515	RESERVOIR TANK HOSE	•	•		•				
21595	THERMO SWITCH	•	•	•	•			•	•

P.N.C.	COMPONENT								
		GOLD	GOLD PEF	NC	RC	NB	RB	NA	NL
21597	RADIATOR FAN MOTOR	•	•	•	•	•	•	•	•
21606	A/T OIL COOLER ASSY	•	•	•	•			•	•
21607	A/T COOLER BYPASS VALVE	•	•						
21621	OIL COOLER TUBE	•	•						
21631	OIL COOLER HOSE	•	•						
21636	A/T OIL COOLER PIPING	•	•		•				
21652	DIFFERENTIAL OIL COOLER	•	•					•	
21660	DIFFERENTIAL OIL PUMP	•	•					•	
21669	THERMAL SWITCH	•	•					•	
21682	DIFFERENTIAL OIL COOLER PIPE	•	•						
22020	TRANSISTOR IGNITION UNIT	•	•	•	•	•	•	•	•
22022	TRANSISTOR (TRIG) UNIT	•	•	•	•	•	•	•	•
22060	DETONATION SENSOR	•	•	•	•	•	•	•	•
22061	DETONATION CONTROL UNIT	•	•	•	•	•	•	•	•
22100	DISTRIBUTOR	•	•	•	•	•	•	•	•
22108	SHAFT	•	•	•	•	•	•	•	•
22115	RELUCTOR	•	•	•	•	•	•	•	•
22120	EGR WATER TEMP SENSOR	•	•		•			•	•
22121	M/H WATER TEMP SWITCH	•	•	•	•			•	•
22122	MIXTURE HEATING RELAY	•	•	•	•			•	•
22127	GOVERNOR WEIGHT	•	•	•	•	•	•	•	•
22129	DISTRIBUTOR PINION	•	•	•	•	•	•	•	•
22132	DISTRIBUTOR CAM	•	•	•	•	•	•	•	•
22157	ROTOR HEAD	•	•	•	•	•	•	•	•
22158	MAGNET	•	•	•	•	•	•	•	•
22159	HARNES	•	•	•	•	•	•	•	•
22162	DISTRIBUTOR CAP	•	•	•	•	•	•	•	•
22163	STATOR	•	•	•	•	•	•	•	•
22172	DISTRIBUTOR PROTECTOR	•	•						
22301	VACUUM CONTROL	•	•	•	•	•	•	•	•
22327	VACUUM TANK	•	•					•	
22360	CANISTER CNTRL VAC CK SWITCH	•	•						
22361	VACUUM SWITCH	•	•	•	•	•	•	•	•
22363	EGR VACUUM CONTROL VALVE	•	•	•	•	•	•	•	•
22364	BOOST SENSOR	•	•	•	•			•	•
22365	EGR VACUUM CONTROL VALVE	•	•					•	
22433	IGNITION COIL/PWR TRANSISTOR	•	•	•	•	•	•	•	•
22450	HIGH TENSION CABLE	•	•						
22460	RESISTOR	•	•						
22465	IGNITION COIL PROTECTOR	•	•						
22604	CONTROL UNIT (ECU)	•	•	•	•	•	•	•	•
22611	CONTROL UNIT - EFI	•	•	•	•	•	•	•	•
22620	THROTTLE VALVE SWITCH	•	•	•	•	•	•	•	•
22622	AIR CUT VALVE	•	•						
22630	WATER TEMP SENSOR	•	•	•	•	•	•	•	•
22631	AIR TEMPERATURE SENSOR	•	•	•	•	•	•	•	•
22632	CYLINDER HEAD TEMP SENSOR	•	•	•	•	•	•	•	•
22635	THERMOTIME SWITCH	•	•						
22660	AIR REGULATOR	•	•	•	•	•	•	•	•
22664	I.S.C. VALVE	•	•	•	•	•	•	•	•
22670	PRESSURE REGULATOR	•	•	•	•	•	•	•	•
22671	PRESSURE REG. CONTROL MODULE	•	•	•	•	•	•	•	•
22674	PRESSURE PUMP	•	•	•	•	•	•	•	•
22675	FUEL DAMPER	•	•					•	
22680	AIR FLOW METER	•	•	•	•	•	•	•	•
22682	AIR FLOW METER BRACKET	•	•						
22686	VACUUM CONTROL VALVE	•	•					•	•
22690	EXHAUST GAS SENSOR	•	•	•	•	•	•	•	•
22690	O ₂ SENSOR	•	•	•	•	•	•	•	•
22691	REAR OXYGEN (O ₂) SENSOR	•	•	•	•	•	•	•	•

COMPONENTS IN PNC NUMERIC SEQUENCE

P.N.C.	COMPONENT								
		GOLD	GOLD P/REF	SILVER	SILVER P/REF	BRONZE	P/REF/IN	P/REF/IN	P/REF/IN+PLUS
22693	DROPPING RESISTOR	•	•						
22694	MAIN RELAY	•	•	•	•			•	•
22695	DROPPING RESISTOR	•	•						
22696	ECC MAIN RELAY	•	•	•	•			•	•
22696	EFI RELAY	•	•	•	•			•	•
22697	MAIN & FUEL PUMP RELAY	•	•	•	•			•	•
22698	DROPPING RESISTOR	•	•						
23100	ALTERNATOR	•	•	•	•	•	•	•	•
23108	ALTERNATOR ROTOR	•	•	•	•	•	•	•	•
23120	ALTERNATOR BEARING	•	•	•	•	•	•	•	•
23133	ALTERNATOR BRUSH & HOLDER	•	•	•	•	•	•	•	•
23150	ALTERNATOR PULLEY	•	•	•	•	•	•	•	•
23215	IC VOLTAGE REGULATOR	•	•	•	•	•	•	•	•
23230	DIODE SET	•	•	•	•	•	•	•	•
23300	STARTER MOTOR ASSY	•	•	•	•	•	•	•	•
23306	FIELD COIL	•	•	•	•	•	•	•	•
23310	ARMATURE	•	•	•	•	•	•	•	•
23312	CLUTCH PINION	•	•	•	•	•	•	•	•
23313	REDUCTION GEAR	•	•	•	•	•	•	•	•
23343	STARTER SOLENOID	•	•	•	•	•	•	•	•
23380	BRUSH	•	•	•	•	•	•	•	•
23710	ECC CONTROL UNIT	•	•	•	•	•	•	•	•
23730	CRANK ANGLE SENSOR	•	•	•	•	•	•	•	•
23731	CRANKSHAFT POS. SENSOR (OBD POS)	•	•	•	•	•	•	•	•
23732	CRANKSHAFT POS. SENSOR (REF)	•	•	•	•	•	•	•	•
23733	CRANK POSITION SENSOR-RING GEAR	•	•	•	•	•	•	•	•
23771	VACUUM CONTROL MODULATOR	•	•						
23781	A.A.C. VALVE	•	•	•	•	•	•	•	•
23796	VTC SOLENOID ASSY	•	•	•	•	•	•	•	•
24010	MAIN HARNESS	•	•	•	•	•	•	•	•
24011	EFI HARNESS	•	•	•	•	•	•	•	•
24012	ENGINE HARNESS	•	•	•	•	•	•	•	•
24013	INSTRUMENT HARNESS	•	•	•	•	•	•	•	•
24014	BODY HARNESS	•	•	•	•	•	•	•	•
24015	TAIL HARNESS	•	•	•	•	•	•	•	•
24016	CHASSIS HARNESS	•	•	•	•	•	•	•	•
24030	CONSOLE HARNESS	•	•	•	•	•	•	•	•
24077	ENGINE SUB HARNESS	•	•	•	•	•	•	•	•
24110	BATTERY CABLE	•	•						
24145	TAIL GATE HARNESS	•	•	•	•	•	•	•	•
24160	ROOM LAMP HARNESS	•	•	•	•	•	•	•	•
24161	FUSIBLE LINK	•	•						
24162	SUN ROOF HARNESS	•	•	•	•	•	•	•	•
24170	AIR BAG HARNESS	•	•	•	•	•	•	•	•
24239	DOOR HARNESS	•	•	•	•	•	•	•	•
24320	REAR WINDOW DEFROSTER	•	•						
24328	DEFROSTER WIRING	•	•						
24330	CIRCUIT BREAKER	•	•					•	
24428	BATTERY FRAME/TRAY/ROD	•	•						
24822	VOLT METER	•	•	•	•			•	•
24835	DIGITAL TEMP METER ASSY	•	•	•	•			•	•
24840	GAUGE ASSEMBLY	•	•	•	•			•	•
24850	SPEEDOMETER	•	•	•	•			•	•
24855	TACHOMETER	•	•	•	•			•	•
24860	FUEL GAUGE	•	•	•	•			•	•
24870	OIL PRESSURE GAUGE	•	•	•	•			•	•
24875	ODOMETER/TRIP METER	•	•	•	•			•	•
24880	COOLANT TEMP GAUGE	•	•	•	•			•	•
24941	HEAD-UP DISPLAY UNIT	•	•	•	•			•	•
25020	LAMP — HICAS WARNING	•	•						

P.N.C.	COMPONENT								
		GOLD	GOLD P/REF	SILVER	SILVER P/REF	BRONZE	P/REF/IN	P/REF/IN	P/REF/IN+PLUS
25021	SECURITY INDICATOR LAMP	•	•	•	•			•	•
25024	EGR CONTROL UNIT	•	•	•	•	•	•	•	•
25030	PRINTED CIRCUIT	•	•	•	•			•	•
25041	WARNING DISPLAY	•	•	•	•			•	•
25050	SPEEDOMETER CABLE	•	•						
25060	FUEL TANK SENSOR	•	•	•	•			•	•
25065	WARNING DISPLAY AMPLIFIER	•	•					•	
25075	OIL TEMP SENSOR	•	•	•	•			•	•
25080	COOLANT TEMP. SENSOR	•	•	•	•			•	•
25085	VACUUM SENSOR	•	•	•	•	•		•	•
25130	O.D. CANCEL/POWER SWITCH	•	•	•	•		•	•	•
25131	SHIFT PATTERN SELECT SWITCH	•	•	•	•		•	•	•
25140	SELECT SWITCH	•	•	•	•		•	•	•
25141	TAIL GATE SWITCH	•	•	•	•		•	•	•
25146	FUEL CUT OFF SWITCH	•	•	•	•			•	•
25160	LIGHTING/COMBO SWITCH	•	•	•	•		•	•	•
25187	ABS MOTOR RELAY	•	•	•	•			•	•
25190	REAR WINDOW ANTENNA AMP**		•	•				•	
25191	SUN ROOF SLIDE SWITCH	•	•	•	•			•	•
25192	SUN ROOF RELAY	•	•	•	•			•	•
25195	RETRACTABLE HEADLAMP SWITCH	•	•	•	•		•	•	•
25200	MIRROR HEAT RELAY	•	•	•	•			•	•
25202	TAIL GATE RELEASE RELAY	•	•	•	•			•	•
25203	HEADLAMP RELAY	•	•	•	•			•	•
25204	REAR DEFROST RELAY	•	•	•	•			•	•
25205	HORN RELAY	•	•	•	•			•	•
25206	SHIFT LOCK RELAY	•	•					•	•
25207	REAR HEATER CONTROL	•	•	•	•			•	•
25208	BLOWER MOTOR RELAY	•	•	•	•			•	•
25209	RELAY, STORAGE OPENER	•	•	•	•			•	•
25210	INSTRUMENT PANEL SWITCH	•	•	•	•		•	•	•
25211	STORAGE OPEN CANCEL RELAY	•	•	•	•			•	•
25212	TOP STK RR LOCK OPENER RELAY	•	•	•	•			•	•
25213	TOP INTERLOCK RELAY	•	•	•	•			•	•
25214	HEATER RELAY	•	•	•	•			•	•
25215	IGNITION RELAY	•	•	•	•			•	•
25216	INHIBITOR RELAY	•	•	•	•			•	•
25217	RADIATOR FAN RELAY	•	•	•	•			•	•
25218	A/C RELAY	•	•	•	•			•	•
25219	AUTO LAMP RELAY	•	•	•	•			•	•
25221	TRUNK LID OPENER RELAY	•	•	•	•			•	•
25222	TRUNK LID OPEN CANCEL RELAY	•	•	•	•			•	•
25224	F.I.C.D. RELAY (Fast Idle Control Device)	•	•	•	•			•	•
25225	REAR A/C RELAY	•	•	•	•			•	•
25228	HEADLAMP DIMMER RELAY	•	•	•	•			•	•
25229	FOG LAMP RELAY	•	•	•	•			•	•
25231	MIXTURE HEATER RELAY	•	•	•	•			•	•
25234	ASCD RELAY	•	•	•	•			•	•
25235	AUTO-CHOKE RELAY	•	•	•	•			•	•
25236	REAR WIPER RELAY	•	•	•	•			•	•
25240	OIL PRESSURE SENDING UNIT	•	•	•	•			•	•
25243	STARTER RELAY	•	•	•	•			•	•
25244	OIL PRESSURE SWITCH	•	•	•	•			•	•
25245	ADCD VACUUM PUMP RELAY	•	•	•	•			•	•
25246	FAN MOTOR RELAY	•	•	•	•			•	•
25247	HICAS RELAY	•	•	•	•			•	•
25248	BODY SONIC RELAY	•	•	•	•			•	•
25249	TRANSFER RELAY	•	•	•	•			•	•
25250	INTERLOCK EMERGENCY RELAY	•	•	•	•			•	•
25252	POWER WINDOW RELAY	•	•	•	•			•	•

COMPONENTS IN PNC NUMERIC SEQUENCE

P.N.C.	COMPONENT								
		GOLD	NC	RC	NB	RB	NA	NL	RM
25257	MAX COLD DOOR RELAY	•	•	•	•			•	•
25258	CLUTCH RELAY	•	•	•	•			•	•
25259	SWITCH – SLIDE DOOR	•	•	•	•			•	•
25259	MULTI-REMOTE CONTROL RELAY	•	•	•	•			•	•
25261	HEADLAMP CLEANER SWITCH	•	•	•	•			•	•
25262	REAR WIPER/WASHER SWITCH	•	•	•	•			•	•
25264	ASCD HOLD RELAY	•	•	•	•			•	•
25267	SWITCH KNOB	•	•					•	•
25269	HEADLAMP DAYTIME RELAY	•	•	•	•			•	•
25273	NAVI SPEAKER RELAY	•	•	•	•	•	•	•	•
25274	REAR HEATER RELAY	•	•	•	•			•	•
25276	N & P RELAY	•	•	•	•			•	•
25280	ILLUMINATION CONTROL	•	•	•	•			•	•
25290	SWITCH – AUTO DOOR ON/OFF	•	•	•	•			•	•
25292	SWITCH – BACK DOOR	•	•	•	•			•	•
25313	UNIT – FOLDING ROOF CONTROL	•	•	•	•			•	•
25320	STOP LAMP SWITCH	•	•	•	•			•	•
25322	FUEL SHUT OFF CLUTCH SWITCH	•	•	•	•	•	•	•	•
25323	ASCD CLUTCH SWITCH	•	•	•	•			•	•
25324	ASCD STOP SWITCH	•	•	•	•			•	•
25330	CIGARETTE LIGHTER	•	•	•	•			•	•
25340	REAR DEFROST SWITCH	•	•	•	•			•	•
25360	DOOR SWITCH	•	•	•	•			•	•
25361	DOOR LOCK SWITCH	•	•	•	•			•	•
25363	BACK DOOR SWITCH	•	•	•	•			•	•
25364	BACK DOOR UNLOCK SWITCH	•	•	•	•			•	•
25365	SWITCH – LIMIT, ROOF FRONT	•	•	•	•			•	•
25366	SWITCH – LIMIT, REAR HATCH	•	•	•	•			•	•
25367	SWITCH – LIMIT, ROOF REAR	•	•	•	•			•	•
25370	SWITCH ASSY – FOG LAMP	•	•	•	•			•	•
25380	BACK DOOR HATCH OPENER SWITCH	•	•	•	•			•	•
25383	STORAGE OPENER SWITCH	•	•	•	•			•	•
25384	TRUNK LID OPENER SWITCH	•	•	•	•			•	•
25385	SWITCH – TRUNK OPENER CANCEL	•	•	•	•			•	•
25390	KICKDOWN SWITCH	•	•	•	•			•	•
25394	FUEL FILLER OPENER SWITCH	•	•	•	•			•	•
25400	DOOR LOCK SWITCH	•	•	•	•			•	•
25401	INTERLOCK EMERGENCY SWITCH	•	•	•	•			•	•
25402	CLUTCH INTERLOCK SWITCH	•	•	•	•			•	•
25410	FUSE BLOCK	•	•	•	•	•	•	•	•
25411	FUSIBLE LINK HOLDER	•	•					•	•
25465	SWITCH – ROOF OPENER	•	•	•	•			•	•
25505	HEADLAMP SENSOR UNIT	•	•	•	•			•	•
25506	TAIL & STOP LAMP SENSOR	•	•	•	•			•	•
25520	FLASHER ASSY-COMBINATION	•	•	•	•			•	•
25521	FLASHER UNIT & RELAY	•	•	•	•			•	•
25522	METER POWER UNIT	•	•					•	•
25529	SEAT BELT WARNING TIMER	•	•					•	•
25540	HEAD LAMP TURN SIGNAL SWITCH	•	•	•	•			•	•
25542	BRUSH ASSEMBLY	•	•	•	•			•	•
25554	SPIRAL CABLE	•	•					•	•
25555	AIRBAG CONTROL UNIT	•	•					•	•
25560	REAR WIPER/WASHER SWITCH	•	•	•	•			•	•
25570	REMOTE MIRROR SWITCH	•	•	•	•			•	•
25580	MIRROR HEAT SWITCH	•	•	•	•			•	•
25591	VOICE WARNING SWITCH	•	•	•	•			•	•
25694	SLIP RING	•	•	•	•	•	•	•	•
25695	TRANSMITTER	•	•					•	•
25696	RECEIVER	•	•					•	•
25697	HEAD AMPLIFIER	•	•					•	•

P.N.C.	COMPONENT								
		GOLD	NC	RC	NB	RB	NA	NL	RM
25720	GLOVE BOX SWITCH	•	•	•	•			•	•
25750	POWER WINDOW MAIN SWITCH	•	•	•	•			•	•
25752	POWER WINDOW SUB SWITCH	•	•	•	•			•	•
25880	HAZARD SWITCH	•	•	•	•			•	•
25911	SPEED SENSOR	•	•	•	•			•	•
25925	VOICE WARNING UNIT	•	•	•	•			•	•
25930	DISPLAY UNIT	•	•	•	•			•	•
25931	CONTROL UNIT	•	•	•	•			•	•
25936	POWER UNIT	•	•	•	•			•	•
25957	NAVI GPS ANTENNA ASSY	•	•	•	•	•	•	•	•
25963	SUSPENSION CONTROL UNIT	•	•	•	•			•	•
25965	SONAR ROAD SENSOR	•	•	•	•			•	•
25987	DRIVE COMPUTER DISPLAY	•	•	•	•			•	•
25990	CONTROL UNIT – BACK DOOR	•	•	•	•			•	•
26010	RETRACTABLE HEADLAMP MOTOR	•	•	•	•			•	•
26023	HEADLAMP ASSY	•	•					•	•
26120	FRONT COMBO LAMP ASSY	•	•					•	•
26160	SIDE MARKER LAMP ASSY	•	•					•	•
26162	SIDE CLEARANCE LAMP	•	•					•	•
26310	HORN	•	•	•	•	•	•	•	•
26350	WARNING CHIME/BUZZER	•	•					•	•
26352	KEYLESS ENTRY BUZZER	•	•	•	•			•	•
26380	WIPER ARM	•	•					•	•
26390	REAR WIPER ARM	•	•					•	•
26410	ROOM/LUGGAGE LAMP	•	•					•	•
26416	SPOT LAMP (SWITCH)	•	•	•	•			•	•
26420	STEP (FOOTWELL) LAMP	•	•					•	•
26430	SWITCH—REAR SIDE WINDOW	•	•	•	•			•	•
26440	FOOT LAMP ASSY	•	•					•	•
26450	VANITY MIRROR LAMP	•	•					•	•
26510	LICENSE LAMP ASSY	•	•					•	•
26540	REVERSE LAMP	•	•					•	•
26550	REAR COMBO LAMP ASSY	•	•					•	•
26551	REAR COMB. LAMP HARNESS	•	•	•	•	•	•	•	•
26553	REAR COMB. LAMP GASKET	•	•	•	•	•	•	•	•
26591	HIGH MOUNT STOP LAMP	•	•					•	•
27000	HEATER UNIT	•	•					•	•
27013	REAR HEATER CORE	•	•	•	•			•	•
27014	REAR HEATER MOTOR	•	•	•	•			•	•
27030	HEATER & A/C CONTROL	•	•	•	•			•	•
27031	VACUUM SELECTOR VALVE	•	•	•	•			•	•
27032	ATC CONTROL	•	•	•	•			•	•
27035	REAR HEATER	•	•					•	•
27038	A/C HARNESS	•	•	•	•	•	•	•	•
27041	A/C SWITCH	•	•	•	•			•	•
27065	BLOWER CASE/HOUSING	•	•					•	•
27070	BLOWER MOTOR & FAN	•	•	•	•			•	•
27071	HEATER CONNECTOR	•	•					•	•
27077	HEATER SWITCH RESISTOR	•	•					•	•
27080	VACUUM ACTUATOR	•	•					•	•
27084	VACUUM TANK	•	•					•	•
27085	EGR RESERVOIR TANK	•	•					•	•
27090	VACUUM WATER COCK	•	•					•	•
27096	VACUUM CHECK VALVE	•	•	•	•	•	•	•	•
27115	HEATER CORE	•	•	•	•			•	•
27116	HEATER COCK	•	•					•	•
27134	CONTROL CABLE	•	•					•	•
27141	MODE ACTUATOR ASSY	•	•					•	•
27150	BLOWER CONTROL AMPLIFIER	•	•					•	•
27151	CENTER DEFROST DUCT	•	•					•	•

COMPONENTS IN PNC NUMERIC SEQUENCE

P.N.C.	COMPONENT								
		GOLD	GOLD PREFERRED	SILVER	SILVER PREFERRED	BRONZE	PREOWNED	PREOWNED PREFERRED	PREOWNED+PLUS
27152	SIDE DEFROST DUCT	•	•						
27167	FLOOR NOZZLE	•	•						
27172	REAR COOLING CASE	•	•						
27173	HEATER DUCT	•	•						
27175	DUCT AIR OUTLET	•	•						
27178	REAR HEATER RESISTOR	•	•	•	•			•	•
27181	HEATER HOSE		•		•				
27322	THERMISTOR	•	•					•	•
27330	THERMO CONTROL UNIT	•	•	•	•			•	•
27375	REAR BLOWER MOTOR	•	•	•	•			•	•
27380	CLOCK	•	•	•	•			•	•
27383	FAN IMPELLER	•	•	•	•			•	•
27410	REAR EVAPORATOR	•	•	•	•	•	•	•	•
27413	REAR A/C HIGH TUBE ASSEMBLY	•	•		•				
27414	REAR A/C LOW TUBE ASSEMBLY	•	•		•			•	
27415	CASE ASSEMBLY	•	•						
27416	TEE TUBE	•	•						
27430	COOLER BOX & TUBING	•	•						
27430	REFRIGERATOR ASSEMBLY	•	•	•	•			•	•
27440	WASHER NOZZLE	•	•						
27450	REAR WASHER NOZZLE	•	•						
27460	WASHER TUBE	•	•						
27470	REAR WASHER TUBE	•	•						
27480	WIPER WASHER TANK	•	•						
27490	REAR WASHER TANK	•	•						
27491	WASHER TANK LEVEL SENSOR	•	•	•	•			•	•
27522	HEADLAMP CLEANER PUMP	•	•						
27528	HEADLAMP CLEANER T-VALVE	•	•						
27534	HEADLAMP CLEANER TANK	•	•						
27538	HEADLAMP CLEANER NOZZLE	•	•						
27582	REAR COOLER HARNESS	•	•	•	•	•		•	•
27619	DRAIN HOSE		•		•				
27621	EVAPORATOR	•	•	•	•	•	•	•	•
27623	HIGH PRESSURE SWITCH	•	•	•	•			•	•
27625	EXPANSION VALVE	•	•	•	•	•	•	•	•
27630	COMPRESSOR ASSY	•	•	•	•	•	•	•	•
27631	RADIATOR FAN CONTROL AMP	•	•						
27640	RECEIVER DRIER	•	•	•	•	•	•	•	•
27648	LOW PRESSURE SWITCH	•	•	•	•			•	•
27650	CONDENSOR	•	•	•	•	•	•	•	•
27651	CONDENSOR FAN & MOTOR	•	•					•	•
27655	FAST IDLE DIAPHRAGM	•	•						
27659	SOLENOID VALVE	•	•	•	•	•	•	•	•
27660	SUCTION THROTTLE VALVE	•	•	•	•	•	•	•	•
27665	REAR A/C SWITCH	•	•	•	•			•	•
27670	SIDE VENT DUCT	•	•						
27671	ACCELERATION CUT SWITCH	•	•	•	•			•	•
27675	THERMO CONTROL AMPLIFIER	•	•	•	•			•	•
27677	COOLER PIPE	•	•		•			•	
27680	JOINT CONNECTOR	•	•		•			•	
27685	VACUUM LOCK-OUT SWITCH	•	•	•	•			•	•
27700	FLOOR DUCT SENSOR	•	•	•	•			•	•
27701	VENTILATOR DUCT SENSOR	•	•	•	•			•	•
27702	DEFROSTER NOZZLE SENSOR	•	•	•	•			•	•
27703	ROOF IN-CAR SENSOR	•	•	•	•			•	•
27704	FOOT IN-CAR SENSOR	•	•	•	•			•	•
27705	SUNLOAD SENSOR	•	•	•	•			•	•
27706	SENSOR GRILLE	•	•	•	•			•	•
27711	VACUUM HOSE		•		•				
27717	FAN CONTROL AMPLIFIER	•	•					•	

P.N.C.	COMPONENT								
		GOLD	GOLD PREFERRED	SILVER	SILVER PREFERRED	BRONZE	PREOWNED	PREOWNED PREFERRED	PREOWNED+PLUS
27723	INTAKE SENSOR	•	•	•	•			•	•
27727	IN-VEHICLE SENSOR	•	•	•	•			•	•
27730	COMPRESSOR SHAFT SEAL	•	•	•	•	•	•	•	•
27732	WATER TEMP SENSOR	•	•	•	•			•	•
27736	BI-LEVEL MOTOR ACTUATOR	•	•					•	
27738	FEEDBACK RESISTOR (PBR)	•	•					•	
27740	AIR MIX DOOR ACTUATOR	•	•					•	
27741	DOUBLE SOLENOID VACUUM VALVE	•	•	•	•	•	•	•	•
27742	MAGNETIC CLUTCH	•	•	•	•	•	•	•	•
27744	SNAP RING	•	•	•	•	•	•	•	•
27747	ACTUATOR - DEFROSTER DOOR	•	•					•	
27748	ACTUATOR-DRIVER SIDE, AIR MIX DOOR	•	•					•	
27749	ACTUATOR-DRIVER SIDE, INTAKE DOOR	•	•					•	
27752	ASPIRATOR FAN	•	•					•	
27755	AMBIENT SENSOR	•	•	•	•			•	•
27764	SUNLOAD SENSOR AMP	•	•	•	•			•	•
27765	SHIFT ACTUATOR VALVE	•	•	•	•	•	•	•	•
27770	SOLENOID VALVE SET	•	•	•	•	•	•	•	•
27860	CENTER VENT DUCT	•	•					•	•
2790A	CLARION AUDIO/COMBO UNIT**		•		•			•	
2790C	PANASONIC AUDIO/COMBO UNIT**		•		•			•	
27913	REAR HEATER GRILLE	•	•					•	•
27922	ANTENNA SWITCH	•	•	•	•			•	•
27933	SPEAKER**	•	•	•	•			•	
2793A	BOSE SPEAKER**	•	•					•	
27934	SPEAKER - WOOFER**	•	•					•	
27950	HEATER REAR DUCT		•	•	•			•	
27960	ANTENNA	•	•	•	•	•	•	•	•
28041	RADIO FINISHER**		•		•			•	
28060	PRE-AMP SPEAKER AMP**		•		•			•	
28063	REAR AMPLIFIER**		•		•			•	
2806C	CLARION SPEAKER AMP**		•		•			•	
2806H	SPEAKER - WOOFER**		•		•			•	
28089	POWER SUPPLY BOX**		•		•			•	
28090	VIDEO OR NAI DISPLAY ASSY	•	•	•	•	•	•	•	•
28091	FES VIDEO MONITOR***		•		•			•	
28119	DVD UNIT**		•		•			•	
2818C	PANASONIC CD PLAYER**		•		•			•	
2818D	SONY CD PLAYER**		•		•			•	
28215	ANTENNA ROD/MAST**		•		•			•	
28268	REMOTE RADIO SWITCH**		•		•			•	
28269	REAR AUDIO PANEL	•	•	•	•			•	•
28357	REAR DEFOGGER CONDENSOR	•	•	•	•			•	•
28360	BONDING (GROUNDING) WIRE**		•		•			•	
28378	BODY SONIC HARNESS	•	•	•	•	•	•	•	•
28396	NAVI SWITCH ASSY		•		•			•	
28397	AV/NAVI SWITCH ASSY		•		•			•	
28400	ASCD ACTUATOR	•	•	•	•			•	•
28401	ASCD SERVO VALVE	•	•	•	•			•	•
28402	ASCD CONTROLLER	•	•	•	•			•	•
28403	ASCD CABLE	•	•	•	•			•	•
28404	ASCD MAIN SWITCH	•	•	•	•			•	•
28412	RETRACTABLE HEADLAMP TIMER	•	•					•	
28415	ASCD SOLENOID VALVE	•	•	•	•			•	•
28417	IPDM/USM MODULE	•	•					•	
28421	CORNERING LAMP UNIT	•	•					•	
28432	TIMER—OIL LEVEL	•	•					•	
28450	DOOR LOCK TIMER	•	•	•	•			•	•
28455	REAR DEFROST TIMER	•	•					•	
28460	INTERIOR LAMP TIMER	•	•					•	

COMPONENTS IN PNC NUMERIC SEQUENCE

P.N.C.	COMPONENT									
		GOLD	GOLD PEF	NC	RC	NB	RB	NA	NL	
28475	STEERING SENSOR ASSY	•	•						•	
28476	STEERING ANGLE SENSOR	•	•	•	•				•	•
28490	ANTENNA TIMER	•	•						•	
28491	INTERLOCK CONTROL UNIT	•	•	•	•	•			•	•
28492	BODY CONTROL LAN MODULE	•	•	•	•				•	•
28495	TRANSFER CONTROL UNIT	•	•	•	•	•			•	•
28500	P/S CONTROL UNIT	•	•	•	•				•	•
28505	HICAS CONTROL UNIT	•	•						•	
28510	WIPER RELAY	•	•	•	•				•	•
28515	POWER WINDOW AMPLIFIER	•	•						•	
28520	AUTO AIR CONTROL AMPLIFIER	•	•						•	
28525	MAGNETIC CLUTCH AMPLIFIER	•	•	•	•				•	•
28543	CONTROL UNIT – SLIDE DOOR	•	•	•	•				•	•
28550	TIME CONTROL UNIT									
28558	SENSE & DIAG (PLANS PRIOR TO 1/1/99)	•	•	•	•				•	•
28570	SEAT BELT CONTROL UNIT	•	•	•	•				•	•
28575	LIGHTING CONTROL	•	•	•	•				•	•
28578	LIGHTING SENSOR	•	•	•	•				•	•
28591	THEFT WARNING CONTROL UNIT	•	•	•	•				•	•
28592	THEFT WARNING SUB-CONTROL	•	•	•	•				•	•
28593	THEFT WARNING RELAY	•	•	•	•				•	•
28594	SMART ENTRANCE CONTROL UNIT	•	•	•	•				•	•
28595	KEYLESS ENTRY CONTROL UNIT	•	•	•	•				•	•
28706	FES VIDEO CASSETTE PLAYER***									
28710	REAR WIPER MOTOR	•	•	•	•				•	•
28765	WASHER MOTOR	•	•	•	•				•	•
28766	REAR WASHER MOTOR	•	•	•	•				•	•
28810	WIPER MOTOR	•	•	•	•	•	•		•	•
28820	INTERMITTANT WIPER AMP.	•	•						•	
28840	WIPER MOTOR ARM	•	•							
28860	WIPER CONNECTING ROD	•	•							
28870	PIVOT ASSY	•	•							
28912	BLOWER MOTOR TIMER	•	•	•	•				•	•
28940	ASCD SPEED SENSOR	•	•	•	•				•	•
2920C	PANASONIC CASSETTE DECK**									
30400	CLUTCH HOUSING	•	•	•	•	•	•		•	•
30501	CLUTCH RELEASE SLEEVE	•	•							
30502	CLUTCH RELEASE BEARING	•	•							
30531	CLUTCH WITHDRAWAL LEVER	•	•							
30537	WITHDRAWAL LEVER PIN	•	•							
30542	DUST COVER	•	•							
30600	CLUTCH DAMPER	•	•							
30610	CLUTCH MASTER CYLINDER	•	•	•	•	•	•		•	•
30620	CLUTCH OPERATING CYLINDER	•	•						•	
30621	BLEEDER (CLUTCH)	•	•							
30628	PUSH ROD	•	•							
30630	CLUTCH BOOSTER	•	•						•	
30631	PUSH ROD	•	•							
30639	CHECK VALVE ASSY	•	•						•	
30650	CLUTCH TUBE & HOSE	•	•							
30664	CLUTCH VACUUM HOSE					•				
30670	CLUTCH OPERATING CABLE	•	•							
31009	CONVERTER BOLT	•	•							
31020	AUTOMATIC TRANS ASSY	•	•	•	•	•	•		•	•
31036	A/T CONTROL UNIT	•	•	•	•	•			•	•
31041	O.D. INDICATOR SWITCH	•	•						•	•
31050	VACUUM MODULATOR	•	•	•	•	•	•		•	•
31051	THROTTLE CABLE	•	•							
31061	VACUUM TUBE	•	•							
31080	OIL LEVEL GAUGE	•	•							

**Coverage applicable only to policies sold on or after April 1, 2003

P.N.C.	COMPONENT									
		GOLD	GOLD PEF	NC	RC	NB	RB	NA	NL	
31100	TORQUE CONVERTER	•	•	•	•	•	•	•	•	•
31240	CVT STEEL BELT	•	•	•	•	•	•	•	•	•
31301	CONVERTER HOUSING	•	•	•	•	•	•	•	•	•
31309	CONVERTER HOUSING GASKET	•	•	•	•	•	•	•	•	•
31310	TRANSMISSION CASE	•	•	•	•	•	•	•	•	•
31322	O.D. CASE (4 SP)	•	•	•	•	•	•	•	•	•
31330	REAR EXTENSION (ADAPTOR)	•	•	•	•	•	•	•	•	•
31331	CONTROL CYLINDER	•	•	•	•	•	•	•	•	•
31335	REAR EXTENSION GASKET	•	•	•	•	•	•	•	•	•
31336	REAR EXTENSION OIL SEAL	•	•	•	•	•	•	•	•	•
31340	OIL PUMP	•	•	•	•	•	•	•	•	•
31343	FRONT OIL SEAL	•	•	•	•	•	•	•	•	•
31344	OIL PUMP HOUSING SEAL	•	•	•	•	•	•	•	•	•
31345	OIL PUMP ROTOR SET	•	•	•	•	•	•	•	•	•
31362	O-RING (AUTO TRANS-SECTION)	•	•	•	•	•	•	•	•	•
31366	OIL PUMP GASKET	•	•	•	•	•	•	•	•	•
31370	BEARING RETAINER (3 SP)	•	•	•	•	•	•	•	•	•
31381	BREATHER	•	•							
31385	DRUM SUPPORT (4 SP)	•	•	•	•	•	•	•	•	•
31390	OIL PAN/VALVE COVER	•	•	•	•	•	•	•	•	•
31391	SIDE COVER	•	•	•	•	•	•	•	•	•
31397	GASKET	•	•	•	•	•	•	•	•	•
31411	INPUT SHAFT	•	•	•	•	•	•	•	•	•
31416	INTERMEDIATE SHAFT (4 SP)	•	•	•	•	•	•	•	•	•
31420	FRONT PLANETARY CARRIER	•	•	•	•	•	•	•	•	•
31428	NEEDLE BEARING	•	•	•	•	•	•	•	•	•
31440	REAR PLANETARY CARRIER	•	•	•	•	•	•	•	•	•
31471	CONNECTING DRUM	•	•	•	•	•	•	•	•	•
31473	ONE-WAY CLUTCH	•	•	•	•	•	•	•	•	•
31475	FORWARD CLUTCH HUB	•	•	•	•	•	•	•	•	•
31480	OUTPUT SHAFT	•	•	•	•	•	•	•	•	•
31486	PARKING GEAR/OIL DISTRIBUTOR	•	•	•	•	•	•	•	•	•
31493	OUTPUT & IDLER GEAR SET	•	•	•	•	•	•	•	•	•
31505	DIRECT CLUTCH (4 SP)	•	•	•	•	•	•	•	•	•
31505	LOW CLUTCH (4 SP)	•	•	•	•	•	•	•	•	•
31510	FRONT CLUTCH ASSY	•	•	•	•	•	•	•	•	•
31510	FRONT/REV. CLUTCH ASSY	•	•	•	•	•	•	•	•	•
31512	REVERSE CLUTCH DRUM	•	•	•	•	•	•	•	•	•
31515	REVERSE CLUTCH ASSY	•	•	•	•	•	•	•	•	•
31540	REAR CLUTCH ASSY	•	•	•	•	•	•	•	•	•
31540	REAR/HIGH CLUTCH	•	•	•	•	•	•	•	•	•
31541	HIGH CLUTCH DRUM	•	•	•	•	•	•	•	•	•
31545	HIGH CLUTCH ASSY	•	•	•	•	•	•	•	•	•
31550	HIGH CLUTCH HUB	•	•	•	•	•	•	•	•	•
31570	FORWARD CLUTCH ASSY	•	•	•	•	•	•	•	•	•
31571	FORWARD CLUTCH DRUM	•	•	•	•	•	•	•	•	•
31580	O.D. PLANETARY CARRIER-4 SP	•	•	•	•	•	•	•	•	•
31591	OVERRUN CLUTCH HUB	•	•	•	•	•	•	•	•	•
31595	OVERRUN CLUTCH ASSY	•	•	•	•	•	•	•	•	•
31615	BAND SERVO	•	•	•	•	•	•	•	•	•
31630	BRAKE BAND	•	•	•	•	•	•	•	•	•
31645	LOW & REVERSE BRAKE	•	•	•	•	•	•	•	•	•
31650	LOW & REVERSE BRAKE	•	•	•	•	•	•	•	•	•
31671	ACCUMULATOR PISTON	•	•	•	•	•	•	•	•	•
31671	ACCUMULATOR (4 SP)	•	•	•	•	•	•	•	•	•
31703	SPEEDOMETER PINION ASSY	•	•	•	•	•	•	•	•	•
31705	CONTROL VALVE ASSY	•	•	•	•	•	•	•	•	•
31728	OIL STRAINER	•	•	•	•	•	•	•	•	•
31860	GOVERNOR	•	•	•	•	•	•	•	•	•
31877	GOVERNOR SEAL RING CAP	•	•	•	•	•	•	•	•	•

***Covered Mobile Entertainment System Components listed

herein are applicable to Preferred Plans on or after April 1, 2004.

COMPONENTS IN PNC NUMERIC SEQUENCE

P.N.C.	COMPONENT										
		GOLD	NC	RC	NB	RB	NA	NL	RM	PLUS	NN
31883	SPEEDOMETER CASE & GEAR	•	•	•	•	•	•	•	•	•	•
31913	RANGE SELECT LEVER	•	•								
31916	GASKET & O-RING	•	•	•	•	•	•	•	•	•	•
31918	INHIBITOR SWITCH	•	•	•	•	•	•	•	•	•	•
31921	MANUAL SHAFT	•	•								
31924	MANUAL PLATE ASSY	•	•								
31931	VACUUM DIAPHRAGM	•	•	•	•	•	•	•	•	•	•
31933	O-RING SEAL	•	•	•	•	•	•	•	•	•	•
31935	REVOLUTION SENSOR	•	•	•	•	•	•	•	•	•	•
31936	TURBINE REVOLUTION SENSOR	•	•	•	•	•	•	•	•	•	•
31940	CONTROL SOLENOID ASSY	•	•	•	•	•	•	•	•	•	•
31941	DOWNSHIFT SOLENOID	•	•	•	•	•	•	•	•	•	•
31942	LOCK-UP SOLENOID	•	•	•	•	•	•	•	•	•	•
31943	SHIFT SOLENOID A	•	•	•	•	•	•	•	•	•	•
31944	SHIFT SOLENOID B	•	•	•	•	•	•	•	•	•	•
31945	O.D. CANCEL SOLENOID	•	•	•	•	•	•	•	•	•	•
31946	LINE PRESSURE SOLENOID	•	•	•	•	•	•	•	•	•	•
31947	OVERRUN, CLUTCH SOLENOID	•	•	•	•	•	•	•	•	•	•
31958	LOW TEMP SENSOR	•	•	•	•	•	•	•	•	•	•
31970	PARKING ROD ASSY	•	•								
31986	PARKING PAWL	•	•	•	•	•	•	•	•	•	•
32005	REVERSE LAMP SWITCH	•	•	•	•	•	•	•	•	•	•
32006	TOP/NEUTRAL SWITCH	•	•	•	•	•	•	•	•	•	•
32007	INDICATOR SWITCH 4WD	•	•	•	•	•	•	•	•	•	•
32008	NEUTRAL SWITCH	•	•	•	•	•	•	•	•	•	•
32100	TRANSMISSION CASE	•	•	•	•	•	•	•	•	•	•
32103	DRAIN PLUG	•	•	•	•	•	•	•	•	•	•
32104	DRAIN PLUG 4WD	•	•	•	•	•	•	•	•	•	•
32104	DRAIN PLUG	•	•	•	•	•	•	•	•	•	•
32107	OIL GUIDE/GUTTER	•	•	•	•	•	•	•	•	•	•
32110	TRANSMISSION FRONT COVER	•	•	•	•	•	•	•	•	•	•
32112	FRONT COVER GASKET	•	•	•	•	•	•	•	•	•	•
32113	FRONT COVER/OIL INPUT SEAL	•	•	•	•	•	•	•	•	•	•
32129	CASE COVER	•	•	•	•	•	•	•	•	•	•
32130	REAR EXTENSION ASSY	•	•	•	•	•	•	•	•	•	•
32131	BREATHER	•	•	•	•	•	•	•	•	•	•
32136	REAR EXTENSION OIL SEAL	•	•	•	•	•	•	•	•	•	•
32200	MAIN DRIVE GEAR	•	•	•	•	•	•	•	•	•	•
32200	OUTPUT SHAFT	•	•	•	•	•	•	•	•	•	•
32202	PILOT BEARING	•	•	•	•	•	•	•	•	•	•
32203	DRIVE GEAR BEARING	•	•	•	•	•	•	•	•	•	•
32203	ROLLER BEARING	•	•	•	•	•	•	•	•	•	•
32204	SNAP RING	•	•	•	•	•	•	•	•	•	•
32211	COUNTERSHAFT	•	•	•	•	•	•	•	•	•	•
32213	COUNTER GEAR	•	•	•	•	•	•	•	•	•	•
32213	INPUT SHAFT	•	•	•	•	•	•	•	•	•	•
32219	COUNTERSHAFT BEARING	•	•	•	•	•	•	•	•	•	•
32219	INPUT SHAFT BEARING	•	•	•	•	•	•	•	•	•	•
32219	ROLLER BEARING	•	•	•	•	•	•	•	•	•	•
32220	REVERSE COUNTER GEAR	•	•	•	•	•	•	•	•	•	•
32230	GEAR, 1ST SPEED	•	•	•	•	•	•	•	•	•	•
32230	MAIN GEAR (1ST)	•	•	•	•	•	•	•	•	•	•
32236	COUNTERSHAFT NUT	•	•	•	•	•	•	•	•	•	•
32241	MAINSHAFT	•	•	•	•	•	•	•	•	•	•
32243	MAINSHAFT LOCK NUT	•	•	•	•	•	•	•	•	•	•
32245	REVERSE GEAR	•	•	•	•	•	•	•	•	•	•
32245	REVERSE MAIN GEAR	•	•	•	•	•	•	•	•	•	•
32250	GEAR, 2ND SPEED	•	•	•	•	•	•	•	•	•	•
32250	MAIN GEAR (2ND)	•	•	•	•	•	•	•	•	•	•
32260	GEAR, 3RD SPEED	•	•	•	•	•	•	•	•	•	•

P.N.C.	COMPONENT										
		GOLD	NC	RC	NB	RB	NA	NL	RM	PLUS	NN
32260	MAIN GEAR (3RD)	•	•	•	•	•	•	•	•	•	•
32261	3RD GEAR INPUT SHAFT	•	•	•	•	•	•	•	•	•	•
32264	NEEDLE BEARING	•	•	•	•	•	•	•	•	•	•
32270	MAIN GEAR (4TH)	•	•	•	•	•	•	•	•	•	•
32271	4TH GEAR INPUT SHAFT	•	•	•	•	•	•	•	•	•	•
32272	NEEDLE ROLLERS	•	•	•	•	•	•	•	•	•	•
32272	PILOT BEARING	•	•	•	•	•	•	•	•	•	•
32273	MAINSHAFT BEARING	•	•	•	•	•	•	•	•	•	•
32273	ROLLER BEARING	•	•	•	•	•	•	•	•	•	•
32281	REVERSE IDLER SHAFT	•	•	•	•	•	•	•	•	•	•
32282	REVERSE IDLER GEAR	•	•	•	•	•	•	•	•	•	•
32283	REVERSE IDLER BEARING	•	•	•	•	•	•	•	•	•	•
32293	RETAINING PIN	•	•	•	•	•	•	•	•	•	•
32310	COUNTERSHAFT GEAR (5TH)	•	•	•	•	•	•	•	•	•	•
32310	INPUT GEAR (5TH)	•	•	•	•	•	•	•	•	•	•
32310	OVERDRIVE COUNTER GEAR	•	•	•	•	•	•	•	•	•	•
32340	MAIN GEAR (5TH)	•	•	•	•	•	•	•	•	•	•
32340	MAINSHAFT GEAR (5TH) BW-T5	•	•	•	•	•	•	•	•	•	•
32340	O. D. (5TH) MAIN GEAR	•	•	•	•	•	•	•	•	•	•
32351	C RING HOLDER	•	•	•	•	•	•	•	•	•	•
32601	SYNCHRO ASSY	•	•	•	•	•	•	•	•	•	•
32601	SYNCHRONIZER HUB	•	•	•	•	•	•	•	•	•	•
32601	SYNCHRO SLEEVE	•	•	•	•	•	•	•	•	•	•
32602	SPREAD RING	•	•	•	•	•	•	•	•	•	•
32603	INSERT SPRING	•	•	•	•	•	•	•	•	•	•
32603	SPREAD RING	•	•	•	•	•	•	•	•	•	•
32604	BAULK RING	•	•	•	•	•	•	•	•	•	•
32606	COUPLING SLEEVE	•	•	•	•	•	•	•	•	•	•
32609	INSERT	•	•	•	•	•	•	•	•	•	•
32609	SHIFTING INSERT	•	•	•	•	•	•	•	•	•	•
32617	REVERSE BAULK RING	•	•	•	•	•	•	•	•	•	•
32680	BAULK RING	•	•	•	•	•	•	•	•	•	•
32680	BAULK RING (1ST)	•	•	•	•	•	•	•	•	•	•
32680	BLOCKER RING	•	•	•	•	•	•	•	•	•	•
32681	BAULK RING (2ND)	•	•	•	•	•	•	•	•	•	•
32681	BLOCKER RING	•	•	•	•	•	•	•	•	•	•
32682	BAULK RING (3RD)	•	•	•	•	•	•	•	•	•	•
32682	BLOCKER RING	•	•	•	•	•	•	•	•	•	•
32683	BAULK RING (4TH)	•	•	•	•	•	•	•	•	•	•
32683	BLOCKER RING	•	•	•	•	•	•	•	•	•	•
32684	BAULK RING (5TH)	•	•	•	•	•	•	•	•	•	•
32684	BLOCKER RING	•	•	•	•	•	•	•	•	•	•
32689	SYNCHRO RING SET (5TH)	•	•	•	•	•	•	•	•	•	•
32701	SPEEDMASTER DRIVE GEAR	•	•	•	•	•	•	•	•	•	•
32703	SPEEDOMETER PINION	•	•	•	•	•	•	•	•	•	•
32721	CHECK BALL & SPRING	•	•	•	•	•	•	•	•	•	•
32801	FORK ROD	•	•	•	•	•	•	•	•	•	•
32801	SIDE GEAR	•	•	•	•	•	•	•	•	•	•
32805	SHIFT FORK	•	•	•	•	•	•	•	•	•	•
32829	CHECK BALL & SPRING	•	•	•	•	•	•	•	•	•	•
32841	CONTROL LEVER	•	•								
32841	CONTROL LEVER BOOT (RWD)	•	•								
32845	O-RING	•	•	•	•	•	•	•	•	•	•
32858	OIL CONTROL SEAL	•	•	•	•	•	•	•	•	•	•
32861	CONTROL LEVER SOCKET (RWD)	•	•								
32862	CONTROL LEVER BOOT (RWD)	•	•								
32865	SHIFT KNOB	•	•								
32890	STRIKING ROD	•	•	•	•	•	•	•	•	•	•
32896	CONTROL SELECTOR ARM	•	•	•	•	•	•	•	•	•	•
32896	STRIKING LEVER	•	•	•	•	•	•	•	•	•	•

COMPONENTS IN PNC NUMERIC SEQUENCE

P.N.C.	COMPONENT								
		GOLD	GOLD PREF	NC	RC	NB	RB	NA	NL
32917	STRIKING ROD PIN	•	•	•	•	•	•	•	•
33100	TRANSFER CASE	•	•	•	•	•	•	•	•
33102	TRANSFER FRONT CASE	•	•	•	•	•	•	•	•
33103	TRANSFER REAR CASE	•	•	•	•	•	•	•	•
33105	TRANSFER CENTER CASE	•	•	•	•	•	•	•	•
33112	FRONT CASE OIL SEAL	•	•	•	•	•	•	•	•
33113	MAIN GEAR	•	•	•	•	•	•	•	•
33114	DRIVE SHAFT OIL SEAL	•	•	•	•	•	•	•	•
33115	RING GEAR	•	•	•	•	•	•	•	•
33116	BALL BEARING	•	•	•	•	•	•	•	•
33116	BALL BEARING (MAIN GEAR)	•	•	•	•	•	•	•	•
33119	END COVER	•	•	•	•	•	•	•	•
33120	COUNTERSHAFT	•	•	•	•	•	•	•	•
33121	COUNTER GEAR	•	•	•	•	•	•	•	•
33122	NEEDLE BEARING	•	•	•	•	•	•	•	•
33123	HYPOID GEAR	•	•	•	•	•	•	•	•
33124	COUNTER GEAR BEARING	•	•	•	•	•	•	•	•
33131	TRANSFER DRIVE SHAFT	•	•	•	•	•	•	•	•
33131	TRANSFER MAIN SHAFT	•	•	•	•	•	•	•	•
33132	LOW SPEED GEAR	•	•	•	•	•	•	•	•
33134	FRONT DRIVE SPROCKET	•	•	•	•	•	•	•	•
33135	DRIVE SHAFT BEARING	•	•	•	•	•	•	•	•
33142	REAR CASE OIL SEAL	•	•	•	•	•	•	•	•
33142	REAR COVER OIL SEAL	•	•	•	•	•	•	•	•
33143	PINION SLEEVE	•	•	•	•	•	•	•	•
33144	COUPLING SLEEVE HUB	•	•	•	•	•	•	•	•
33147	FRONT COVER OIL SEAL	•	•	•	•	•	•	•	•
33150	TRANSFER FRONT CASE	•	•	•	•	•	•	•	•
33150	TRANSFER FRONT COVER	•	•	•	•	•	•	•	•
33151	FRONT DRIVE SHAFT	•	•	•	•	•	•	•	•
33152	NEEDLE BEARING	•	•	•	•	•	•	•	•
33154	COUPLING SLEEVE	•	•	•	•	•	•	•	•
33156	COMPANION FLANGE	•	•	•	•	•	•	•	•
33158	HYPOID PINION	•	•	•	•	•	•	•	•
33159	DRIVE CHAIN	•	•	•	•	•	•	•	•
33161	SHIFT ROD	•	•	•	•	•	•	•	•
33162	SHIFT FORK	•	•	•	•	•	•	•	•
33164	FRONT SHIFT BRACKET	•	•	•	•	•	•	•	•
33169	SHIFT FORK SPRING	•	•	•	•	•	•	•	•
33180	SHIFT SHAFT	•	•	•	•	•	•	•	•
33185	SHIFT SHAFT OIL SEAL	•	•	•	•	•	•	•	•
33210	TRANSFER CONTROL LEVER	•	•	•	•	•	•	•	•
33216	CENTER CASE OIL SEAL	•	•	•	•	•	•	•	•
33219	TRANSFER SHIFT KNOB	•	•	•	•	•	•	•	•
33822	CROSS SHAFT	•	•	•	•	•	•	•	•
33940	TRANSFER PROTECTOR	•	•	•	•	•	•	•	•
34103	CONTROL ROD	•	•	•	•	•	•	•	•
34103	CONTROL ROD (FWD)	•	•	•	•	•	•	•	•
34310	ACTUATOR ASSY	•	•	•	•	•	•	•	•
34400	CONTROL ROD LOWER BRACKET	•	•	•	•	•	•	•	•
34410	SHIFT ROD TRUNNION	•	•	•	•	•	•	•	•
34415	SELECT LEVER ASSY (RWD)	•	•	•	•	•	•	•	•
34430	CROSS SHAFT LEVER	•	•	•	•	•	•	•	•
34441	LOWER CONTROL ROD	•	•	•	•	•	•	•	•
34445	CONTROL CABLE (RWD)	•	•	•	•	•	•	•	•
34451	SUB TRANSMISSION ROD	•	•	•	•	•	•	•	•
34452	SUB TRANSMISSION ROD	•	•	•	•	•	•	•	•
34504	DUST COVER HOLDER	•	•	•	•	•	•	•	•
34506	DUST COVER (FWD)	•	•	•	•	•	•	•	•
34507	CROSS SHAFT LEVER	•	•	•	•	•	•	•	•

P.N.C.	COMPONENT								
		GOLD	GOLD PREF	NC	RC	NB	RB	NA	NL
34520	CROSS SHAFT ASSY	•	•	•	•	•	•	•	•
34559	SUPPORT ROD (FWD)	•	•	•	•	•	•	•	•
34560	SUPPORT ROD BRACKET	•	•	•	•	•	•	•	•
34582	SUPPORT ROD DAMPER	•	•	•	•	•	•	•	•
34692	CROSS OVER SHAFT	•	•	•	•	•	•	•	•
34903	A/T CONTROL DEVICE	•	•	•	•	•	•	•	•
34908	KEY INTERLOCK CABLE ASSY	•	•	•	•	•	•	•	•
34912	COMPRESSION ROD	•	•	•	•	•	•	•	•
34915	LEVER SHAFT	•	•	•	•	•	•	•	•
34917	POSITION PLATE PIN	•	•	•	•	•	•	•	•
34920	CONTROL LEVER	•	•	•	•	•	•	•	•
34926	RETURN SPRING	•	•	•	•	•	•	•	•
34935	SELECTOR ROD/CONTROL CABLE	•	•	•	•	•	•	•	•
34936	A/T/ CABLE	•	•	•	•	•	•	•	•
34970	INTERLOCK SOLENOID	•	•	•	•	•	•	•	•
34980	"PARK" POSITION SWITCH-A/T VEHICLES	•	•	•	•	•	•	•	•
36010	HAND BRAKE CONTROL	•	•	•	•	•	•	•	•
36011	PARKING BRAKE SWITCH	•	•	•	•	•	•	•	•
36320	RATCHET NAIL	•	•	•	•	•	•	•	•
36326	HAND BRAKE STEM	•	•	•	•	•	•	•	•
36327	PARKING BRAKE RELEASE ROD	•	•	•	•	•	•	•	•
36328	HAND BRAKE BRACKET	•	•	•	•	•	•	•	•
36335	HAND BRAKE GUIDE	•	•	•	•	•	•	•	•
36337	HAND BRAKE SPRING	•	•	•	•	•	•	•	•
36339	HAND BRAKE CONTROL LEVER YOKE	•	•	•	•	•	•	•	•
36372	HAND BRAKE LEVER	•	•	•	•	•	•	•	•
36381	CLEVIS PIN (HAND BRAKE)	•	•	•	•	•	•	•	•
36402	FRONT CABLE	•	•	•	•	•	•	•	•
36421	CENTER LEVER BRACKET	•	•	•	•	•	•	•	•
36437	ADJUSTER NUT	•	•	•	•	•	•	•	•
36450	REAR CABLE	•	•	•	•	•	•	•	•
36451	CROSS CABLE	•	•	•	•	•	•	•	•
36452	REAR CABLE/ROD	•	•	•	•	•	•	•	•
36510	CENTER LEVER	•	•	•	•	•	•	•	•
36518	EQUALIZER	•	•	•	•	•	•	•	•
36525	HANGER STRAP/SWING ARM	•	•	•	•	•	•	•	•
36525	SWING ARM	•	•	•	•	•	•	•	•
36538	CLEVIS & PIN (HAND BRAKE)	•	•	•	•	•	•	•	•
36545	RETURN SPRING	•	•	•	•	•	•	•	•
36547	REAR CABLE ADJUSTER	•	•	•	•	•	•	•	•
37000	PROPELLER SHAFT	•	•	•	•	•	•	•	•
37010	FRONT PROPELLER SHAFT	•	•	•	•	•	•	•	•
37125	JOURNAL ASSY	•	•	•	•	•	•	•	•
37511	CENTER BEARING BRACKET	•	•	•	•	•	•	•	•
37519	CENTER BEARING BRACKET	•	•	•	•	•	•	•	•
37520	CENTER DRIVE BEARING	•	•	•	•	•	•	•	•
37521	CENTER BEARING	•	•	•	•	•	•	•	•
37522	CENTER BEARING INSULATOR	•	•	•	•	•	•	•	•
38100	RING & PINION SET	•	•	•	•	•	•	•	•
38101	FINAL GEAR	•	•	•	•	•	•	•	•
38102	DRIVE GEAR BOLT	•	•	•	•	•	•	•	•
38106	FINAL GEAR	•	•	•	•	•	•	•	•
38120	REAR PINION BEARING	•	•	•	•	•	•	•	•
38121	PINION BEARING	•	•	•	•	•	•	•	•
38140	FRONT PINION BEARING	•	•	•	•	•	•	•	•
38162	AXLE SHAFT	•	•	•	•	•	•	•	•
38162	REAR AXLE SHAFT	•	•	•	•	•	•	•	•
38163	REAR AXLE SHAFT NUT	•	•	•	•	•	•	•	•
38165	PINION BEARING SPACER	•	•	•	•	•	•	•	•
38169	PILOT BEARING SPACER	•	•	•	•	•	•	•	•

COMPONENTS IN PNC NUMERIC SEQUENCE

P.N.C.	COMPONENT								
		GOLD	GOLD PREF	SILVER	SILVER PREF	BRONZE	PREDIWNED	PREDIWN PREF	PREDIWN+PLUS
38189	DRIVE PINION OIL SEAL	•	•	•	•	•	•	•	•
38210	COMPANION FLANGE	•	•	•	•	•	•	•	•
38212	COMPANION FLANGE	•	•	•	•	•	•	•	•
38220	SIDE FLANGE	•	•	•	•	•	•	•	•
38221	SIDE FLANGE 4WD	•	•	•	•	•	•	•	•
38310	DIFFERENTIAL CARRIER (HOUSING)	•	•	•	•	•	•	•	•
38311	DIFFERENTIAL CARRIER 4WD	•	•	•	•	•	•	•	•
38320	REAR COVER GASKET	•	•	•	•	•	•	•	•
38323	TRANSFER BREATHER	•	•						
38335	FRONT PILOT BEARING	•	•	•	•	•	•	•	•
38341	4WD SIDE BEARING RETAINER	•	•	•	•	•	•	•	•
38342	DIFFERENTIAL SIDE OIL SEAL	•	•	•	•	•	•	•	•
38344	DIFFERENTIAL SIDE OIL SEAL 4WD	•	•	•	•	•	•	•	•
38345	SIDE RETAINER O-RING 4WD	•	•	•	•	•	•	•	•
38351	REAR COVER	•	•	•	•	•	•	•	•
38352	BREATHER	•	•				•		
38353	BREATHER 4WD	•	•				•		
38354	BREATHER HOSE		•		•				
38355	DRAIN PLUG	•	•	•	•	•		•	•
38410	DIFFERENTIAL CASE	•	•	•	•	•	•	•	•
38413	SIDE GEAR	•	•	•	•	•	•	•	•
38414	SIDE GEAR	•	•	•	•	•	•	•	•
38415	PINION MATE	•	•	•	•	•	•	•	•
38416	PINION MATE	•	•	•	•	•	•	•	•
38417	PINION MATE SHAFT	•	•	•	•	•	•	•	•
38418	PINION MATE SHAFT	•	•	•	•	•	•	•	•
38420	LTD SLIP DIFFERENTIAL	•	•	•	•	•	•	•	•
38421	DIFFERENTIAL CASE	•	•	•	•	•	•	•	•
38423	SIDE GEAR	•	•	•	•	•	•	•	•
38424	SIDE GEAR THRUST WASHER	•	•	•	•	•	•	•	•
38425	PINION MATE	•	•	•	•	•	•	•	•
38426	PINION MATE THRUST WASHER	•	•	•	•	•	•	•	•
38427	PINION MATE SHAFT	•	•	•	•	•	•	•	•
38428	PINION SHAFT LOCK PIN	•	•	•	•	•	•	•	•
38429	PINION SHAFT LOCK PIN 4WD	•	•	•	•	•	•	•	•
38430	THRUST BLOCK	•	•	•	•	•	•	•	•
38431	LSD PRESSURE RING	•	•	•	•	•	•	•	•
38432	LSD FRICTION PLATE	•	•	•	•	•	•	•	•
38433	LSD FRICTION DISC	•	•	•	•	•	•	•	•
38440	SIDE BEARING	•	•	•	•	•	•	•	•
38441	COUNTERSHAFT BEARING	•	•	•	•	•	•	•	•
38444	SIDE BEARING	•	•	•	•	•	•	•	•
38446	SIDE BEARING	•	•	•	•	•	•	•	•
38512	DRIVE FLANGE	•	•	•	•	•	•	•	•
38519	FRONT DRIVE SHAFT 4WD	•	•	•	•	•	•	•	•
38540	RING & PINION 4WD	•	•	•	•	•	•	•	•
38541	FRONT PINION BEARING 4WD	•	•	•	•	•	•	•	•
38542	RING & PINION BEARING 4WD	•	•	•	•	•	•	•	•
38543	PINION BEARING SPACER 4WD	•	•	•	•	•	•	•	•
38544	DRIVE PINION OIL SEAL 4WD	•	•	•	•	•	•	•	•
38545	COMPANION FLANGE 4WD	•	•	•	•	•	•	•	•
38546	DIFFERENTIAL CASE 4WD	•	•	•	•	•	•	•	•
38547	SIDE GEAR 4WD	•	•	•	•	•	•	•	•
38548	SIDE GEAR THRUST WASHER	•	•	•	•	•	•	•	•
38549	PINION MATE 4WD	•	•	•	•	•	•	•	•
38550	PINION MATE THRUST WASHER	•	•	•	•	•	•	•	•
38551	PINION MATE SHAFT 4WD	•	•	•	•	•	•	•	•
38552	SIDE BEARING 4WD	•	•	•	•	•	•	•	•
38553	DRIVE GEAR BOLT 4WD	•	•	•	•	•	•	•	•
38720	DIFFERENTIAL CASE	•	•	•	•	•	•	•	•

P.N.C.	COMPONENT								
		GOLD	GOLD PREF	SILVER	SILVER PREF	BRONZE	PREDIWNED	PREDIWN PREF	PREDIWN+PLUS
38727	PINION MATE SHAFT	•	•	•	•	•	•	•	•
38760	VISCOUS COUPLING	•	•	•	•	•	•	•	•
39100	FRONT DRIVE SHAFT	•	•	•	•	•	•	•	•
39600	DRIVE SHAFT	•	•	•	•	•	•	•	•
39625	SPIDER ASSY	•	•	•	•	•	•	•	•
39655	DRIVE SHAFT BOOT	•	•						
39714	SLIDE JOINT HOUSING	•	•	•	•	•	•	•	•
39720	SLIDE JOINT SPIDER	•	•	•	•	•	•	•	•
40014	KNUCKLE SPINDLE (FWD)	•	•	•	•	•	•	•	•
40014	KNUCKLE SPINDLE (REAR)	•	•	•	•	•	•	•	•
40022	KING PIN	•	•	•	•	•	•	•	•
40030	KING PIN BEARING	•	•	•	•	•	•	•	•
40038	STEERING STOPPER BOLT	•	•						
40039	STOPPER BOLT CAP	•	•						
40052	KNUCKLE ARM	•	•	•	•	•	•	•	•
40088	DUST COVER (CV BOOT)		•						
40088	DRIVE SHAFT BOOT		•						
40110	UPPER BALL JOINT	•	•	•	•	•	•	•	•
40160	LOWER BALL JOINT	•	•	•	•	•	•	•	•
40173	LOWER BALL JOINT SEAT	•	•	•	•	•	•	•	•
40202	FRONT WHEEL HUB	•	•	•	•	•	•	•	•
40213	DRIVE SHAFT BEARING 4WD	•	•	•	•	•	•	•	•
40215	FRONT WHEEL BEARING	•	•	•	•	•	•	•	•
40222	FRONT HUB BOLT	•	•						
40232	GREASE SEAL	•	•	•	•	•	•	•	•
40250	FREE RUNNING HUB 4WD	•	•	•	•	•	•	•	•
40252	DRIVE CLUTCH GEAR 4WD	•	•	•	•	•	•	•	•
40262	LOCK NUT	•	•				•		
40513	REAR COVER 4WD	•	•	•	•	•	•	•	•
40515	REAR COVER GASKET 4WD	•	•	•	•	•	•	•	•
41025	CALIPER YOKE	•	•	•	•	•	•	•	•
41040	HOLD DOWN PIN	•	•	•	•	•	•	•	•
41041	PIVOT PIN	•	•	•	•	•	•	•	•
41083	ANTI-SQUEAK SPRING	•	•						
41086	CLIP	•	•	•	•	•	•	•	•
41110	FRONT CALIPER	•	•	•	•	•	•	•	•
41120	CALIPER SEAL & PISTON	•	•	•	•	•	•	•	•
41151	FRONT BAFFLE PLATE	•	•						
41182	AIR GUIDE	•	•						
43011	BEAM—REAR AXLE	•	•	•	•			•	•
43018	HOUSING, RR AXLE	•	•	•	•	•	•	•	•
43052	BUSHING ASSY-AXLE HOUSING	•	•	•	•	•	•	•	•
43204	REAR WHEEL HUB	•	•	•	•	•	•	•	•
43213	REAR AXLE COMPANION FLANGE	•	•	•	•	•	•	•	•
43215	REAR AXLE BEARING	•	•	•	•	•	•	•	•
43222	REAR HUB BOLT	•	•						
43232	SEAL GREASE, RR HUB	•	•	•	•	•	•	•	•
43252	REAR AXLE OIL SEAL	•	•	•	•	•	•	•	•
43262	LOCK NUT	•	•				•		
44010	REAR CALIPER	•	•	•	•	•	•	•	•
44020	BACK PLATE	•	•						
44025	CALIPER BODY	•	•	•	•	•	•	•	•
44040	HOLD DOWN PIN	•	•	•	•	•	•	•	•
44075	EXTENSION LINK	•	•					•	
44081	ANTI-RATTLE PIN	•	•						
44082	HAND BRAKE CONTROL LVR YOKE	•	•						
44090	REAR BRAKE RETURN SPRING	•	•						
44095	TOGGLE LEVER	•	•	•	•			•	•
44100	REAR WHEEL CYLINDER	•	•	•	•	•	•	•	•
44118	LEVER ASSY	•	•						

COMPONENTS IN PNC NUMERIC SEQUENCE

P.N.C.	COMPONENT								
		GOLD	GOLD PREF	NC	RC	NB	RB	NA	NL
44120	PISTON & SEAL	•	•	•	•	•	•	•	•
44151	REAR BAFFLE PLATE	•	•						
44180	ANCHOR – PARKING BRAKE	•	•						
44200	ADJUSTER ASSY	•	•						
46010	MASTER CYLINDER	•	•	•	•	•	•	•	•
46020	OIL RESERVOIR CAP	•	•						
46045	RESERVOIR SEAL	•	•	•	•	•	•	•	•
46048	LEVEL INDICATOR	•	•						
46063	PISTON ASSY	•	•	•	•	•	•	•	•
46082	SNAP RING	•	•						
46090	FLUID RESERVOIR	•	•	•	•			•	•
46093	FLUID STRAINER	•	•						
46113	RESERVOIR HOSE	•	•		•			•	
46123	CLEVIS PIN	•	•					•	
46284	BRAKE PIPE	•	•	•	•	•	•	•	•
46313	CONNECTOR	•	•	•	•	•	•	•	•
46400	DP/LOAD SENSING VALVE	•	•	•	•	•	•	•	•
46515	BRAKE MASTER CYL BRACKET	•	•						
46518	PEDAL STOPPER	•	•						
46520	BRAKE PEDAL	•	•						
46525	BRAKE PEDAL BUSHING	•	•						
46526	CLUTCH PEDAL BUSHING	•	•						
46540	CLUTCH PEDAL	•	•						
46560	BRAKE FULCRUM SHAFT	•	•						
46580	PEDAL SHIFT SLEEVE	•	•						
46585	BRAKE PEDAL SPRING	•	•						
46586	CLUTCH PEDAL RET. SPRING	•	•						
47100	VACUUM TANK	•	•						
47110	VACUUM TANK ASSY	•	•						
47210	BRAKE BOOSTER	•	•	•	•	•	•	•	•
47211	BRAKE BOOSTER SPACER	•	•						
47475	BRAKE BOOSTER CONNECTOR	•	•		•				
47476	VACUUM TUBE	•	•						
47478	CHECK VALVE	•	•	•	•			•	•
47600	ACTIVATOR ASSY	•	•	•	•			•	•
47605	ABS ACTUATOR RELAY	•	•						
47850	MODULE ASSY	•	•	•	•			•	•
47900	SENSOR ASSY (RR) ANTI-SKID	•	•	•	•			•	•
47910	SENSOR ASSY (FR) ANTI-SKID	•	•	•	•			•	•
47930	DECELERATION SENSOR ASSY	•	•	•	•			•	•
47935	GUARD-ANTI-SKID SPLASH	•	•	•	•			•	•
47945	STEERING ANGLE SENSOR	•	•						
47950	ROTOR ASSY (RR) SENSOR	•	•	•	•			•	•
47960	BRACKET-FRONT SENSOR	•	•	•	•			•	•
47970	ROTOR ASSY (FR) SENSOR	•	•	•	•			•	•
48001	RACK & PINION ASSY	•	•	•	•	•	•	•	•
48010	STEERING GEAR ASSY	•	•	•	•	•	•	•	•
48011	STEERING GEAR HOUSING	•	•	•	•	•	•	•	•
48023	STEERING GEAR PINION	•	•	•	•	•	•	•	•
48025	PINION GEAR BEARING	•	•	•	•	•	•	•	•
48025	PINION OIL SEAL	•	•	•	•	•	•	•	•
48025	WORM GEAR BEARING	•	•	•	•	•	•	•	•
48060	FILLER PLUG	•	•						
48080	STEERING LOWER JOINT	•	•	•	•	•		•	•
48100	STEERING RACK	•	•	•	•	•	•	•	•
48103	SECTOR SHAFT	•	•	•	•	•	•	•	•
48125	WORM OIL SEAL	•	•	•	•	•	•	•	•
48127	SECTOR SHAFT BEARING	•	•	•	•	•	•	•	•
48135	SECTOR SHAFT ADJUST SCREW/NUT	•	•						
48137	SECTOR SHAFT OIL SEAL	•	•	•	•	•	•	•	•

P.N.C.	COMPONENT								
		GOLD	GOLD PREF	NC	RC	NB	RB	NA	NL
48150	STEERING WORM ASSY	•	•	•	•	•	•	•	•
48201	SECTOR SHAFT COVER	•	•	•	•	•	•	•	•
48203	STEERING GEAR BOOT	•	•						
48204	SECTOR SHAFT COVER GASKET	•	•	•	•	•	•	•	•
48210	REAR HOUSING	•	•	•	•	•	•	•	•
48212	REAR HOUSING CAP	•	•	•	•	•	•	•	•
48214	REAR HOUSING OIL SEAL	•	•	•	•	•	•	•	•
48231	ADJUSTER	•	•	•	•	•	•	•	•
48353	RACK MOUNT CLAMP	•	•						
48376	RACK MOUNT INSULATOR	•	•						
48400	STEERING WHEEL	•	•						
48401	LOCK NUT	•	•						
48420	HORN BUTTON ASSY	•	•	•	•	•	•	•	•
48475	A/T CONTROL INDICATOR	•	•					•	
48476	IGNITION KEY LAMP ASSY	•	•						
48502	STEERING GEAR ARM	•	•	•	•	•	•	•	•
48503	STEERING GEAR LOCK NUT	•	•	•	•	•	•	•	•
48510	SIDE ROD ASSY	•	•	•	•	•	•	•	•
48512	SIDE ROD BAR	•	•	•	•	•	•	•	•
48514	LOCK NUT	•	•	•	•	•	•	•	•
48520	OUTER SOCKET	•	•	•	•	•	•	•	•
48521	INNER SOCKET	•	•	•	•	•	•	•	•
48522	DUST COVER	•	•						
48523	SLOTTED NUT	•	•						
48530	STEERING IDLER ARM	•	•	•	•	•	•	•	•
48534	STEERING IDLER FIXING BOLT	•	•	•	•	•	•	•	•
48535	STEERING IDLER LOCK NUT	•	•	•	•	•	•	•	•
48560	CROSS ROD	•	•	•	•	•	•	•	•
48562	SIDE ROD CLIP	•	•						
48611	STEERING DAMPER	•	•	•	•			•	•
48700	STEERING LOCK	•	•	•	•			•	•
48712	A/T SHIFTLCK SYSTEM	•	•					•	
48750	IGNITION SWITCH	•	•	•	•	•	•	•	•
48760	TRANSFER GEAR ASSY	•	•	•	•	•	•	•	•
48805	STEERING COLUMN ASSY	•	•	•	•	•	•	•	•
48820	STEERING COLUMN SHAFT	•	•	•	•	•	•	•	•
48821	UPPER COLUMN SHAFT	•	•	•	•	•	•	•	•
48860	JACKET TUBE	•	•						
48861	UPPER JACKET TUBE	•	•						
48960	STEERING COLUMN CLAMP	•	•						
48967	JOINT COVER	•	•						
48970	TILT LEVER	•	•						
49001	POWER STEERING GEAR ASSEMBLY	•	•	•	•	•	•	•	•
49110	POWER STEERING PUMP	•	•	•	•	•	•	•	•
49115	PUMP RESERVOIR TANK	•	•					•	•
49181	PUMP CAP	•	•						
49200	POWER STEERING GEAR ASSEMBLY	•	•	•	•	•	•	•	•
49203	O-RING	•	•	•	•	•	•	•	•
49226	PINION OIL SEAL	•	•	•	•	•	•	•	•
49297	RACK PACKING	•	•	•	•	•	•	•	•
49365	STUB SHAFT SEAL	•	•	•	•	•	•	•	•
49522	RACK BUSHING	•	•	•	•	•	•	•	•
49525	O-RING	•	•	•	•	•	•	•	•
49541	CYLINDER TUBE	•	•		•			•	
49710	HOSE/TUBE-PUMP TO GEAR	•	•	•	•	•	•	•	•
49716	PRESSURE TUBE ASSY	•	•		•			•	
49720	HOSE/TUBE GEAR TO PUMP	•	•		•			•	
49722	P/S TUBE HOSE	•	•						
49725	POWER STEERING RETURN HOSE	•	•		•				
49731	BREATHER TUBE	•	•						

COMPONENTS IN PNC NUMERIC SEQUENCE

P.N.C.	COMPONENT								
		GOLD	GOLD PREF	SILVER	SILVER PREF	BRONZE	PREOWNED	PREOWN PREF	PREOWN+PLUS
49761	POWER STEERING OIL SWITCH	•	•	•	•	•	•	•	•
49810	FLOW CONTROL VALVE	•	•	•	•	•	•	•	•
49836	PRESSURE CONTROL VALVE ASSY	•	•					•	
54010	FRONT COIL SPRING (STRUT)	•	•	•	•	•		•	•
54010	FRONT LEAF SPRING	•	•	•	•	•		•	•
54010	FRONT TORSION BAR	•	•	•	•	•	•	•	•
54036	SPRING SEAT	•	•	•	•	•	•	•	•
54050	BOUND BUMPER	•	•	•	•	•	•	•	•
54053	REBOUND BUMPER	•	•						
54055	STRUT DUST COVER	•	•	•	•	•	•	•	•
54059	STRUT DUST SEAL	•	•	•	•	•	•	•	•
54080	TORQUE ARM	•	•					•	
54210	ANCHOR ARM	•	•					•	
54216	ANCHOR ADJ. BOLT & NUT	•	•						
54302	STRUT ASSY	•	•	•	•	•	•	•	•
54308	GLAND PACKING	•	•	•	•	•	•	•	•
54320	STRUT INSULATOR	•	•	•	•	•	•	•	•
54325	STRUT BEARING	•	•	•	•	•		•	•
54342	REBOUND STOPPER	•	•						
54390	ADJ. SHOCK SUB-HARNESS	•	•	•	•	•		•	•
54401	FRONT SUSPENSION MEMBER	•	•						
54402	SUPPORT BRACKET-FRNT SUSP MBER	•	•						
54419	LINK SPINDLE	•	•	•	•	•	•	•	•
54419	LOWER LINK SPINDLE	•	•	•	•	•	•	•	•
54470	TENSION ROD	•	•	•	•	•	•	•	•
54471	TENSION/COMPRESSION ROD	•	•	•	•	•	•	•	•
54476	BUSHING	•	•	•	•	•	•	•	•
54476	TENSION ROD BUSHING	•	•	•	•	•	•	•	•
54480	TENSION ROD BRACKET	•	•						
54499	TRANSVERSE LINK GUSSETT	•	•	•	•	•	•	•	•
54504	BUSHING	•	•	•	•	•	•	•	•
54507	UPPER LINK BUSHING	•	•	•	•	•	•	•	•
54524	UPPER LINK ASSY	•	•	•	•	•	•	•	•
54527	UPPER LINK BRACKET	•	•						
54529	LOWER LINK	•	•	•	•	•	•	•	•
54529	TRANSVERSE LINK	•	•	•	•	•	•	•	•
54533	UPPER LINK	•	•	•	•	•	•	•	•
54535	BUSHING	•	•	•	•	•	•	•	•
54536	UPPER LINK SPINDLE	•	•	•	•	•	•	•	•
54590	STEERING KNUCKLE EXTENSION	•	•	•	•	•	•	•	•
54611	FRONT STABILIZER	•	•	•	•	•	•	•	•
54614	BRACKET & BUSHING	•	•	•	•	•	•	•	•
54618	CONNECTING ROD BUSHING	•	•	•	•	•	•	•	•
54619	ROC-RR STAB. LAUNCHING	•	•	•	•	•	•	•	•
54710	FRONT DIFFRNTL MOUNTNG INSULATOR	•	•	•	•	•	•	•	•
54720	FRONT DIFFRNTL MOUNTNG MEMBER	•	•	•	•	•	•	•	•
54751	FRONT DIFFRNTL MOUNTNG STOPPER	•	•	•	•	•	•	•	•
54752	FRNT DIFF MOUNTNG STOPPR BRACKET	•	•	•	•	•	•	•	•
55015	BRACKET	•	•	•	•	•		•	•
55019	LOWER LINK ASSY	•	•	•	•	•	•	•	•
55019	LOWER LINK (IRS-4WD)	•	•	•	•	•	•	•	•
55020	REAR COIL SPRING (IRS)	•	•	•	•	•	•	•	•
55020	REAL COIL SPRING (STRUT)	•	•	•	•	•	•	•	•
55020	REAR COIL SPRING-LINK TYPE	•	•	•	•	•	•	•	•
55020	REAR SPRING (LEAF)	•	•	•	•	•	•	•	•
55020	TORSION BAR	•	•	•	•	•	•	•	•
55023	UPPER LINK	•	•	•	•	•	•	•	•
55024	PARALLEL ROD	•	•	•	•	•	•	•	•
55036	REAR SPRING SEAT (IRS)	•	•					•	
55036	REAR SPRING SEAT (STRUT)	•	•	•	•	•	•	•	•

P.N.C.	COMPONENT								
		GOLD	GOLD PREF	SILVER	SILVER PREF	BRONZE	PREOWNED	PREOWN PREF	PREOWN+PLUS
55036	SPRING SEAT (LINK TYPE)	•	•					•	
55042	INNER BUSHING	•	•	•	•	•	•	•	•
55043	OUTER BUSHING	•	•	•	•	•	•	•	•
55044	SPRING MOUNT BUSHING	•	•	•	•	•	•	•	•
55045	SUSPENSION ARM BUSHING	•	•	•	•	•	•	•	•
55046	SHACKLE BUSHING	•	•	•	•	•	•	•	•
55047	LOWER LINK BUSHING	•	•	•	•	•	•	•	•
55048	UPPER LINK BUSHING	•	•	•	•	•	•	•	•
55054	LOCATION PLATE	•	•					•	
55100	REAR SUSPENSION LOWER LINK ASSY	•	•					•	
55121	LINK ASSY RR SUSPENSION UPPER FR	•	•					•	
55122	CONTROL ROD	•	•	•	•	•	•	•	•
55130	PANHARD ROD	•	•					•	
55131	LINK ASSY RR SUSPENSION UPPER RR	•	•	•	•	•	•	•	•
55135	PANHARD ROD BUSHING	•	•	•	•	•	•	•	•
55140	RADIUS ROD AND BOLT	•	•					•	
55142	RADIUS ROD BUSHING	•	•						
55154	REAR AXLE BALL JOINT ASSY	•	•	•	•	•	•	•	•
55202	SPRING MOUNT	•	•						
55220	SPRING SHACKLE	•	•						
55225	REAR SPRING PIN	•	•						
55226	SUSPENSION ARM BOLT	•	•						
55227	SPRING LOCK PLATE	•	•						
55240	BOUND BUMPER (IRS)	•	•						
55240	BOUND BUMPER-LEAF SPRING	•	•						
55240	BOUND BUMPER-LINK TYPE	•	•						
55241	STRUT BOUND BUMPER	•	•						
55243	SPRING PAD (LEAF)	•	•						
55247	SPRING CLIP	•	•						
55252	LOWER LINK BRACKET	•	•						
55262	SPRING SEAT (LEAF)	•	•						
55270	UPPER LINK BRACKET	•	•						
55302	REAR STRUT ASSY	•	•	•	•	•	•	•	•
55308	GLAND PACKING	•	•	•	•	•	•	•	•
55320	STRUT MOUNT INSULATOR	•	•	•	•	•	•	•	•
55401	REAR SUSPENSION MEMBER	•	•	•	•	•	•	•	•
55425	TORQUE ARRESTER	•	•					•	
55451	STAY-RR SUSPENSION MEMBER	•	•						
55466	REAR SUSPENSION MOUNT	•	•						
55470	DIFFERENTIAL MOUNTING MEMBER	•	•						
55471	DIFFERENTIAL MOUNTING BRACKET	•	•						
55480	PARALLEL ROD BUSHING	•	•	•	•	•	•	•	•
55495	SUSPENSION BAR (MULTI-LINK)	•	•						
55500	TORSION BEAM — REAR AXLE	•	•	•	•	•	•	•	•
55501	SUSPENSION ARM ASSY	•	•	•	•	•	•	•	•
55502	REAR ARM ASSY	•	•	•	•	•	•	•	•
55520	ANCHOR ARM	•	•					•	
55524	PARALLEL ROD BOLT	•	•						
55525	ANCHOR ARM SLEEVE	•	•					•	
55530	REAR ARM BRACKET	•	•						
55539	TORSION BAR STOPPER	•	•						
55545	SPRING SEAT STAY	•	•						
55705	ELECTRIC CYLINDER ASSY	•	•	•	•	•	•	•	•
55710	HICAS POWER CYLINDER ASSY	•	•	•	•	•	•	•	•
55740	HICAS MOTOR ASSY	•	•						
55741	MAIN POSITION SENSOR ASSY	•	•	•	•			•	•
55742	SUB POSITION SENSOR ASSY	•	•	•	•			•	•
55743	BUSHING	•	•	•	•	•	•	•	•
55750	PRESSURE REAR TUBE/HOSE SET	•	•					•	
55780	CUT OFF VALVE ASSY	•	•						

COMPONENTS IN PNC NUMERIC SEQUENCE

P.N.C.	COMPONENT								
		GOLD	NC	RC	NB	RB	NA	NL	RM
56220	LINK DAMPER	•	•						
56230	REAR STABILIZER	•	•	•	•	•	•	•	•
56231	CONNECT ROD BUSHING	•	•	•	•	•	•	•	•
56233	BRACKET-RR STABILIZER	•	•						
56243	MOUNTING BRACKET BUSHING	•	•	•	•	•	•	•	•
62860	FRESH AIR DUCT	•	•						
65400	HOOD HINGE	•	•						
65470	HOOD STAY	•	•						
65601	HOOD LOCK	•	•						
65620	HOOD LOCK CABLE	•	•						
65630	HOOD SWITCH	•	•	•	•			•	•
66550	SIDE VENT NOZZLE	•	•						
68542	THEFT WARNING PIN SWITCH	•	•	•	•			•	•
68725	CONTROL KNOB	•	•						
68742	DEFROSTER GRILLE	•	•						
68745	SIDE DEFROSTER GRILLE	•	•						
68790	CENTER VENT NOZZLE	•	•						
73520	SUN ROOF LOCK	•	•						
73640	SUN ROOF FRAME/SEAL	•	•						
73662	SUN ROOF RAIL ASSY	•	•						
73670	SUN ROOF MOTOR GUIDE BRACKET	•	•		•			•	•
73678	SUN ROOF LIMIT SWITCH	•	•	•	•			•	•
73685	SUN ROOF MOTOR	•	•	•	•			•	•
73812	SUN ROOF STRIKER	•	•						
73820	FEMALE LOCK	•	•						
73834	SUN ROOF SEAL	•	•						
73860	ROOF PANEL HINGE	•	•					•	
73876	DRAIN HOSE (SUNROOF)	•	•		•				
73908	COVER – REAR FLOOR	•	•						
73960	SUNSHADE – SKYROOF	•	•						
74661	FLOOR INSULATOR	•	•						
74830	SEAT BELT/ANCHOR STAY	•	•						
75891	ENGINE UNDER COVER	•	•		•				
76730	REAR SEAT BACK CENTER SUPPORT	•	•						
76829	REAR SIDE WINDOW HINGE	•	•						
76870	REAR SIDE WINDOW HANDLE	•	•						
76880	FINISHER – ROOF FRONT LATCH	•	•						
76871	SIDE WTHRSTRP RETAINER ASSY	•	•						
76874	HEADER WTHRSTRP RETAINER ASSY	•	•						
77790	UPPER RAIL GUIDE	•	•						
77796	REAR RAIL GUIDE	•	•						
78402	FUELING STOPPER ASSY	•	•					•	
78526	TRUNK LID SWITCH	•	•	•	•			•	•
78826	FUEL FILLER LID OPENER	•	•						
78852	FUEL LID ACTUATOR	•	•	•	•			•	•
79926	RR PARCELSHLF BRACKET ASSY	•	•						
80400	FRONT DOOR HINGE	•	•						
80430	DOOR STOPPER LINK	•	•						
80502	FRONT LOCK	•	•						
80510	LOCK KNOB ROD	•	•						
80512	REMOTE CONTROL ROD	•	•						
80519	KNOB ROD PROTECTOR	•	•						
80520	GUIDE PIN	•	•						
80524	PIN RECEIVER	•	•						
80550	DOOR LOCK ACTUATOR	•	•	•	•			•	•
80570	LOCK STRIKER	•	•						
80595	LOCK KNOB	•	•						
80600	LOCK CYLINDER	•	•						
80604	KEYBOARD	•	•	•	•			•	•
80605	FRONT OUTSIDE HANDLE	•	•						

P.N.C.	COMPONENT								
		GOLD	NC	RC	NB	RB	NA	NL	RM
80608	HANDLE ROD	•	•						
80670	FRONT INSIDE HANDLE	•	•						
80700	FRONT WINDOW REGULATOR	•	•	•	•			•	•
80730	FRONT REGULATOR MOTOR	•	•	•	•			•	•
82400	REAR DOOR HINGE	•	•						
82440	UPPER STOPPER	•	•						
82442	LOWER STOPPER	•	•						
82470	UPPER MALE DOVETAIL	•	•						
82472	UPPER FEMALE DOVETAIL	•	•						
82474	LOWER MALE DOVETAIL	•	•						
82476	LOWER FEMALE DOVETAIL	•	•						
82502	REAR LOCK ASSY	•	•						
82510	LOCK KNOB ROD	•	•						
82512	REMOTE CONTROL ROD	•	•						
82530	MOTOR – CLOSING	•	•	•	•			•	•
82550	AUTO DOOR LOCK ACTUATOR	•	•	•	•			•	•
82560	MOTOR – SLIDE DOOR	•	•	•	•			•	•
82570	LOCK STRIKER	•	•						
82580	MOTOR – BACK DOOR OPEN/CLOSE	•	•	•	•			•	•
82595	LOCK KNOB	•	•						
82605	REAR OUTSIDE HANDLE	•	•						
82608	HANDLE ROD	•	•						
82670	REAR INSIDE HANDLE	•	•						
82700	REAR WINDOW REGULATOR	•	•	•	•			•	•
82730	REAR REGULATOR MOTOR	•	•	•	•			•	•
82760	REGULATOR HANDLE	•	•						
83331	WELT – REAR WINDOW	•	•						
83500	REAR SIDE WINDOW MOTOR	•	•	•	•			•	•
83502	SLIDE DOOR LOCK ASSY	•	•						
83506	REAR SIDE WINDOW REGULATOR	•	•	•	•			•	•
83512	REMOTE CONTROL ROD	•	•						
83605	OUTSIDE HANDLE	•	•						
83670	INSIDE HANDLE	•	•						
83752	REGULATOR WIRE	•	•						
83810	SLIDE DOOR ROLLER	•	•						
83840	SLIDE DOOR LINK	•	•						
84420	DECK LID LOCK STRIKER	•	•						
84440	LID OPENER LEVER	•	•						
84450	LID OPENER CABLE	•	•						
84460	DECK LID LOCK	•	•						
84471	TRUNK OPENER SOLENOID	•	•	•	•			•	•
84472	MOTOR – STORAGE LID OPENER	•	•	•	•			•	•
84480	SWITCH – STORAGE LID STOP	•	•	•	•			•	•
84510	DECK LID HINGE	•	•						
84532	DECK LID TORSION BAR	•	•						
84680	TRUNK LID OPENER ACTUATOR	•	•	•	•			•	•
85210	RR BUMPER SHOCK ABS./STAY	•	•						
86401	RECLINING SWITCH	•	•	•	•			•	•
86509	SENSOR – PRESSURE DETECTION	•	•	•	•			•	•
86878	PASSIVE BUCKLE ASSY	•	•					•	
86910	SEAT BELT POWER UNIT	•	•					•	
86920	SEAT BELT SLIDE ASSY	•	•					•	
86970	SEAT BELT LIMIT SWITCH	•	•	•	•			•	•
86980	SEAT BELT LIMIT SWITCH	•	•	•	•			•	•
86982	SWITCH–SEAT SLIDE	•	•	•	•			•	•
87020	SIDE AIRBAG HARNESS	•	•	•	•			•	
87060	BACK VIBRATOR PLATE	•	•						
87080	CUSHION VIBRATOR PLATE	•	•						
87352	SLIDE, LIFT SWITCH (PWR/SEAT)	•	•	•	•			•	•
87408	SPECIAL BOLT	•	•						

COMPONENTS IN PNC NUMERIC SEQUENCE

P.N.C.	COMPONENT										
		GOLD	GOLD PREF	SILVER	SILVER PREF	BRONZE	PREOWNED	PREOWN PREF	PREOWN+PLUS	RM	NN
87504	FRT. SEAT LIMIT SWITCH	•	•	•	•				•	•	
87652	AIR PUMP	•	•								
87653	SLIDE ASSY (PWR/SEAT)	•	•	•	•				•	•	
87654	LIFT ASSY (PWR/SEAT)	•	•	•	•				•	•	
88201	SEAT SWIVEL ASSY	•	•								
88350	2ND SEAT BACK HINGE	•	•								
88451	REAR RECLINING DEVICE ASSY	•	•								
88501	2ND SEAT SLIDE	•	•								
88505	SLIDE ASSY—3RD SEAT	•	•								
88603	REAR SEAT BACK LOCK	•	•								
88604	REAR SEAT BACK STRIKER	•	•								
89130	HINGE – 3RD SEAT LOWER	•	•								
89303	3RD SEAT HINGE ASSY	•	•								
89341	SEAT LOCK ASSY	•	•								
89342	LOCK ASSY—2ND SEAT	•	•								
89401	RECLINING DEVICE ASSY	•	•								
89552	RAIL ASSY—3RD SEAT	•	•								
90502	BACK DOOR LOCK & HANDLE	•	•								
90510	TAILGATE STOPPER	•	•								
90523	STRIP – PINCH, BACK DOOR	•	•								
90550	GLASS HATCH OPENER ACTUATOR	•	•	•	•				•	•	
90552	MOTOR – REAR HATCH CLOSURE	•	•	•	•				•	•	
90605	INTELLIGENT KEY SWITCH—TRNK/BACK DR	•	•	•	•				•	•	
90623	TAILGATE WEDGE/DOVETAIL	•	•								
90940	TAILGATE HANDLE	•	•								
91350	SUNROOF RAIL ASSEMBLY	•	•	•	•	•	•	•	•	•	
92200	EXPANSION VALVE	•	•	•	•				•	•	
92270	ASCD VACUUM PUMP	•	•								
92310	SUPER HEAT SWITCH	•	•	•	•				•	•	
92316	THERMAL PROTECTOR	•	•						•	•	
92330	ACCELERATION CUT TIMER	•	•						•	•	
92331	SUPER HEAT TIMER	•	•						•	•	
92420	REAR HEATER HOSE	•	•	•	•						
92433	REAR HEATER TUBE	•	•	•	•				•	•	
92463	REAR COOLER PIPE	•	•	•	•				•	•	
92480	LOW PRESSURE FLEXIBLE HOSE	•	•	•	•				•	•	
92490	HIGH PRESSURE FLEXIBLE HOSE	•	•	•	•				•	•	
92741	PIPE – REAR HIGH/LOW COOLER	•	•	•	•				•	•	
92855	COMPRESSOR RPM SENSOR	•	•	•	•				•	•	
96302	ELECTRIC DOOR MIRROR	•	•	•	•				•	•	
96940	A/T RANGE INDICATOR	•	•								
97004	FRAME ASSY – FOLDING ROOF	•	•								
97012	NO.1 BOW ASSY	•	•								
97020	NO. 2 BOW ASSY	•	•								
97040	NO. 3 BOW ASSY	•	•								
97061	REAR FRAME	•	•								
97082	RECEIVER, PULL-DOWN LATCH	•	•								
97087	PULL-DOWN CLAMP ASSY	•	•								
97088	LATCH – ROOF FRPNT	•	•								
97089	STAY REAR HATCH	•	•								
97090	LOCK ASSY, REAR	•	•								
97092	REAR LOCK STRIKER PIN	•	•								
97093	MOTOR – FOLDING ROOF	•	•								
97094	TOP FOLDING HOOK ASSY	•	•								
97097	REHOOK ASSY, TOP STACK	•	•	•	•				•	•	
97100	RAIL ASSY, FRONT	•	•								
97106	RAIL ASSY, CENTER	•	•								
97112	RAIL ASSY, REAR	•	•								
97120	LINK ASSY, BALANCE	•	•								
97125	MOTOR/RAIL – REAR HATCH	•	•								

P.N.C.	COMPONENT										
		GOLD	GOLD PREF	SILVER	SILVER PREF	BRONZE	PREOWNED	PREOWN PREF	PREOWN+PLUS	RM	NN
97132	LINK, CONTROL	•	•								
97142	TOP STACK FOLDING BRACKET	•	•								
97143	BRACKET-FOLDING ROOF FRONT MOUNTING	•	•								
97145	BRACKET-FOLDING ROOF REAR MOUNTING	•	•								
97146	BALANCE SPRING	•	•								
97155	COVER RETAINER, FRONT	•	•								
97164	HEADLINER RETAINER, NO. 1 BOW	•	•								
97167	HEADLINER RETAINER, NO. 3 BOW	•	•								
97173	PLATE - FOLDING ROOF	•	•								
97177	WELT - FOLDING ROOF	•	•								
97178	FRONT RAIL SHIM	•	•								
97179	SHIM – FOLDING ROOF	•	•								
97180	FRONT WTHRSTRP RETAINER ASSY	•	•								
97184	REAR WTHRSTRP RETAINER ASSY	•	•								
97188	CENTER RAIL SHIM	•	•								
97240	HINGE ASSY, STORAGE LID	•	•								
97242	BAR, STORAGE LID	•	•								
97243	SHIM – STORAGE LID HINGE	•	•								
97244	DOVETAIL ASSY, STORAGE LID	•	•								
97246	RECEIVER, DOVETAIL	•	•								
97252	SPRING, STORAGE LID LOWER	•	•								
97254	ROLLER ASSY, STORAGE LID	•	•								
97256	GUIDE RAIL ASSY	•	•								
97259	DOVETAIL BOLT ASSY	•	•								
97260	LOCK ASSY, STORAGE LID	•	•								
97262	STRIKER, STORAGE LID	•	•								
97264	ACTUATOR ASSY, STORAGE OPENER	•	•	•	•				•	•	
97266	FRONT STORAGE LID BUMPER	•	•								
97270	CABLE ASSY, TOP STORAGE OPENER	•	•								
97273	CABLE ASSY, TOP OPENER	•	•								
97274	CENTER STORAGE LID BUMPER	•	•								
97278	ACTUATOR ASSY, TOP OPENER	•	•	•	•				•	•	
97283	FINISHER – OVERHEAD	•	•								
97530	SCREEN – REAR	•	•								
98515	ASSIST AIRBAG MODULE	•	•	•	•				•	•	
98520	AIRBAG MODULE	•	•	•	•				•	•	
98581	SENSOR (PLANS PRIOR TO 1/1/99)	•	•	•	•				•	•	
98830	SIDE AIRBAG MODULE ASSY	•	•								
98840	AIRBAG ON/OFF SWITCH	•	•	•	•				•	•	
98841	AIRBAG ON/OFF SWITCH HARNESS	•	•	•	•				•	•	
98850	MODULE ASSY-AIR BAG PRESSURE DETECTION	•	•	•	•				•	•	
AA018	MES AUXILIARY SWITCH***	•	•								
AA018	MES OVERHEAD MONITOR***	•	•						•	•	
AA018	MES VCR/DVD UNIT***	•	•						•	•	
AA018	MES INTERFACE BOX***	•	•						•	•	
AA018	MES REMOTE SWITCH***	•	•						•	•	
AA018	MES HEADPHONES***	•	•						•	•	
AA600	V.S.S. ELECTRONIC MODULE	•	•	•	•				•	•	
AA601	V.S.S. STATUS PANEL	•	•	•	•				•	•	
AA602	V.S.S. HARNESSS	•	•	•	•				•	•	
AA603	V.S.S. PIN SWITCH	•	•	•	•				•	•	
AA700	V.S.S. ELECTRONIC MODULE	•	•	•	•				•	•	
B8118	CD CHANGER CARTRIDGE**	•	•								
K1951	BOW ASSY #1	•	•								
K2032	BOW ASSY #4	•	•								
K2038	BOW ASSY #2	•	•								
K2050	BOW ASSY #3	•	•								
K2252	FRT. DOOR GUIDE LOCATOR/RECEIVER	•	•								
K2573	REAR VIEW MIRROR	•	•								

COMPONENTS IN PNC NUMERIC SEQUENCE

P.N.C.	COMPONENT	GOLD	NC	GOLD PEF	RC	SILVER	NB	SILVER PEF	RB	BRONZE	NA	PREOWNED	NL	PREOWN PEF	RM	PREOWN+PLUS	NN
K3086	TOP STACK CONTROL SWITCH	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
K3185	DECK LID GAS STRUT	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
K3353	TOP LOGIC RELAY/JUMPER	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
K3658	TOP MECHANISM CLAMP ASSY	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
K4412	REAR SIDE WINDOW SWITCH/BEZEL	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
K5204	FRT.DOOR GUIDE PIN/SECONDARY PIN	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
K6658	DECK LID HINGE ASSY	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
K8048	HYDRAULIC MOTOR/PUMP. ASSY	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
K8049	HYDRAULIC CYLINDER ASSY	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
K8097	HOSE/BYPASS VALVE ASSY	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
K8098	SIDE WINDOW REGULATOR ASSY	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•